



# Command Center RX USER GUIDE



Authorized Dealer  
Choice Office Equipment  
[www.theChoice4biz.com](http://www.theChoice4biz.com)  
(630) 390-7020

## Legal Notes

Unauthorized reproduction of all or part of this guide is prohibited.

The information in this guide is subject to change without notice.

Examples of the operations given in this guide support the Windows 7 printing environment. Essentially the same operations are used for Microsoft Windows Vista, Windows XP, Windows Server 2003, Windows Server 2008, and Windows Server 2012 environments.

We cannot be held liable for any problems arising from the use of this product, regardless of the information herein.

## Regarding Trademarks

Microsoft Windows is a registered trademark of Microsoft Corporation in the U.S. and/or other countries. KPD L is a trademark of Kyocera Corporation. PCL is a trademark of Hewlett-Packard Company.

All other brand and product names herein are registered trademarks or trademarks of their respective companies.

© 2013 KYOCERA Document Solutions Inc.

---

# Table of Contents

|  |           |
|--|-----------|
| Legal Notes .....                            | 1         |
| Regarding Trademarks.....                    | 1         |
| <b>1 Introduction.....</b>                   | <b>1</b>  |
| System Requirements .....                    | 1         |
| Accessing the Embedded Server .....          | 1         |
| <b>2 The Embedded Server Home Page .....</b> | <b>2</b>  |
| Login.....                                   | 2         |
| Top Bar.....                                 | 3         |
| Navigation Menu .....                        | 4         |
| Device Status .....                          | 6         |
| <b>3 About Login.....</b>                    | <b>7</b>  |
| Levels of Login .....                        | 7         |
| <b>4 Document Box .....</b>                  | <b>9</b>  |
| Custom box .....                             | 9         |
| FAX Box .....                                | 12        |
| Sub Address Box.....                         | 14        |
| Polling Box .....                            | 15        |
| Job Box Settings .....                       | 16        |
| <b>5 Address Book .....</b>                  | <b>17</b> |
| Machine Address Book .....                   | 17        |
| External Address Book Settings.....          | 19        |
| One Touch Key .....                          | 19        |
| <b>6 Device Settings.....</b>                | <b>21</b> |
| Paper/Feed/Output.....                       | 21        |
| Original Document.....                       | 23        |
| Energy Saver/Timer .....                     | 23        |
| Date/Time.....                               | 25        |
| System .....                                 | 26        |
| <b>7 Function Settings .....</b>             | <b>28</b> |
| Common/Job Default.....                      | 28        |

---

---

|                                    |           |
|------------------------------------|-----------|
| Copy .....                         | 32        |
| Printer .....                      | 33        |
| E-mail .....                       | 35        |
| Scan to Folder .....               | 38        |
| DSM Scan .....                     | 39        |
| FAX/i-FAX .....                    | 40        |
| Send and Forward .....             | 44        |
| RX/Forward Rules .....             | 46        |
| Operation Panel .....              | 49        |
| <b>8 Network Settings .....</b>    | <b>52</b> |
| General .....                      | 52        |
| TCP/IP .....                       | 53        |
| Protocol .....                     | 60        |
| <b>9 Security Settings .....</b>   | <b>64</b> |
| Device Security .....              | 64        |
| Network Security .....             | 68        |
| Certificates .....                 | 70        |
| <b>10 Management Settings.....</b> | <b>72</b> |
| Job Accounting .....               | 72        |
| Authentication.....                | 74        |
| ID Card .....                      | 77        |
| Notification/Report.....           | 78        |
| History Settings .....             | 80        |
| SNMP .....                         | 83        |
| System stamp.....                  | 84        |
| Message Board .....                | 86        |
| Reset .....                        | 87        |
| <b>11 Troubleshooting .....</b>    | <b>89</b> |

---

---

# 1 Introduction

Command Center RX (Remote eXtension), which will hereafter be referred to as the embedded server, refers to the web server that is built into the printing device. It allows you to verify the operating status of the device and make settings related to security, network printing, E-mail transmission and advanced networking.

With the embedded server, the administrator can remotely track paper and toner usages per user and the status of optional equipment installed. The embedded server also configures device settings, monitors jobs, and manages document boxes and address books.

## System Requirements

The embedded server operates in the following environment. Check the following before use.

### Protocol

- The TCP/IP protocol is installed on the PC.
- An IP address is assigned to the printing system.

### Web browser

- Microsoft Internet Explorer 8.0 or later (Microsoft Internet Explorer operates on Microsoft Windows XP/ Vista/7/8, and Microsoft Windows Server 2003/2008/2012.)
- Mozilla Firefox 14.0 or later
- Safari 5.0 or later (Safari operates on Apple Mac OS X 10.4 or later.)
- Google Chrome 21.0 or later

## Accessing the Embedded Server

Access the embedded server by entering the printing system's host name or IP address in a web browser. Obtain the IP address from your network administrator.

1. Open a web browser.
2. Enter the device's host name or IP address as the URL. If you use the host name, you must first specify the DNS server information. For example, `https://192.168.10.1`.

If the screen "There is a problem with this website's security certificate." is displayed, configure the certificate. For details, see *Certificates* on page 70. You can also continue the operation without configuring the certificate.

The embedded server's home page will be accessed and displayed.

For initial login, use the predefined "Admin" as the Use Name, and "Admin" as the Password to access all the pages. For initial login, use the predefined Admin as the Use Name, and Admin as the Password to access all the pages. This is set up internally.

## 2 The Embedded Server Home Page

The embedded server's home page allows you to select a category from the navigation menu on the left to view and set values for that category, as well as displaying information on the device, user, and consumables on the right, which changes according to the selection in the navigation menu.



### Login

To fully access the features of the embedded server pages, enter the User Name and Password and click Login. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Device Settings on the navigation menu.

The screenshot shows the Kyocera Command Center RX interface. At the top, it displays the Kyocera logo, the product name 'Command Center RX', and the model 'TASKalfa 3051ci'. It also shows the host name 'KM66162E' and the location. The top bar includes a 'Home' button, a language dropdown set to 'English', an 'Auto-refresh' checkbox, and a 'Last Updated' timestamp of '2012/12/14 03:36:23' with a refresh icon.

The main content area is divided into several sections:

- Admin:** A sidebar menu with a 'Logout' button and links to 'Device Information', 'Job Status', 'Document Box', 'Address Book', 'Device Settings', 'Function Settings', 'Network Settings', 'Security Settings', 'Management Settings', and 'Links'.
- Device Status:** A table showing the status of various devices.
 

| Device         | Status |
|----------------|--------|
| Printer        | Ready. |
| Scanner        | Ready. |
| FAX            | Ready. |
| Status Message | Ready. |
- Operation Panel Usage:** A table showing user status.
 

| User        | Status      |
|-------------|-------------|
| [User Icon] | Not in Use. |
- Paper:** A table showing paper levels for different cassettes.
 

| Source     | Size | Type  | Capacity | Status   |
|------------|------|-------|----------|----------|
| Cassette 1 | A4   | Plain | 500      | 30 %     |
| Cassette 2 | A4   | Plain | 500      | No Paper |
| Cassette 3 | A4   | Plain | 1500     | No Paper |

To access the embedded server pages, the users can be identified by choosing one of network authentication, local authentication, and job accounting authentication methods. For details, see 3 About Login Levels of Login on page.

## Top Bar

At the top of the home page, you can perform the following:

### Home

To quickly return to this home page (top page) from any other server page, click **Home**.

### Select language

The embedded server supports multiple languages. To change the language that the embedded server is displayed in, open the language drop down list and select the appropriate language. If you attempt to view the embedded server with a character set other than the language that is used on the operation panel's display, some characters may be garbled.

### Auto-refresh

To continuously update the embedded server's pages to the most recent status, select the **Auto-Refresh** check box.

### Refresh

Click this circular arrow icon to refresh the embedded server pages any time.

## Navigation Menu

The navigation menu at the left of the home page divides the following functions onto separate bars. By clicking each bar, you can jump to the desired page as outlined below:

### My Information/User Properties

My Information or User Properties is accessible when you have logged in to the embedded server with a general user or administrator privilege, and user authentication is enabled. This page summarizes the general settings to which access is granted by the general user. This depends on the scope of the user's or group's privileges. For example, if a user is allowed access to the document box, he/she can add or delete documents in the document box shown in **My Information**.

### Device Information

This page includes this machine's various information. After clicking on **Device Information**, information is available in the following device information pages:

#### Configuration

This page includes this machine's various information that apply to the entire machine, such as Device Defaults (basic, ID information, and capability) as well as optional equipment installed, firmware, network parameters, and FAX parameters.

#### Counter

This page includes the printed pages and scanned pages. You can narrow details by pulling down **Type**.

#### About Command Center RX

This page includes the firmware version and the list of web browsers supported by the embedded server.

### Job Status

This page includes information on all device jobs including job status for printing, scanning, storing, and scheduled jobs as well as the job log. After clicking on **Job Status**, information is available in the following job status pages: The displayed items vary depending on the access level.

#### Printing Job Status, Sending Job Status, Storing Job Status

Displays details on each job. You can narrow details by pulling down **Type**. Click **Refresh** to update the list. Click **Cancel Job** to abort the job. To see details of each job in the log, click the **Number** or the **Job Name**.

#### Scheduled Jobs (when FAX is installed)

This page is populated with FAX jobs currently scheduled for transmission. Click **Refresh** to update the list. Click **Cancel Job** to remove the FAX job from the list to abort.

#### Printing Job Log, Sending Job Log, Storing Job Log

Displays logs to track jobs of each type. You can narrow details by pulling down **Type**. Click **Refresh** at the right end of the Top Bar to update the list of logs. To see details of each job in the log, click the **Number** or the **Job Name**.

### Document Box

This page allows you to add, edit, or delete a document box, and delete documents in a document box. This page allows you to add, edit, or delete a document box, and delete documents in a document box. Under **Document Box**, **Custom Box**,

**Fax Box, Sub Address Box, Polling Box, and Job Box Settings** are included. For more information, see *Document Box* on page 9.

### Address Book

This page allows you to add, edit, or delete a contact address or a group of addresses. Under **Address Book, Machine Address Book, External Address Book Settings, and One Touch Key** are included. For more information, see *Address Book* on page 17.

### Device Settings

This page includes advanced settings that apply to the entire device. Under **Device Settings, Paper/Feed/Output, Original Document, Energy Saver/Timer, Date/Time** and **System** are included. For more information, see *Device Settings* on page 21.

### Function Settings

This page includes advanced settings of each function that the device has. Under **Function Settings, Common/Job Defaults, Copy, Printer, E-mail, Scan to Folder, DSM Scan, FAX/i-FAX, Send and Forward, RX/Forward Rules, and Operation Panel** are included. For more information, see *Function Settings* on page 28.

### Network Settings

This page includes advanced network settings that apply to the device. Under **Network Settings, General, TCP/IP, and Protocol** are included. For more information, see *Network Settings* on page 52.

### Security Settings

This page includes advanced security settings that apply to the device. Under **Security Settings, Device Security, Send Security, Network Security, and Certificates** are included. For more information, see *Security Settings* on page 64.

### Management Settings

This page includes advanced management settings that apply to the device. Under **Management Settings, Job Accounting, Authentication, ID Card, Notification/Report, History Settings, SNMP, System Stamp, Message Board, and Reset** are included. For more information, see *Management Settings* on page 72.

### Links

Links to our websites. Visit the following website for more information and downloads.

#### Download Drivers and Software

For downloading printer drivers and software:  
KYOCERA Document Solutions - Download  
<http://www.kyoceradocumentsolutions.com/download/>

#### About KYOCERA Document Solutions

For more information about products:  
KYOCERA Document Solutions Website  
<http://www.kyoceradocumentsolutions.com/>

#### HyPAS Applications

The link information is displayed when the HyPAS applications are installed and configuring their settings.

**Network options**

When the optional network interface kit (IB-50 or IB-51) is attached to the machine, the link information to web page of IB-50 or IB-51 is displayed.

## Device Status

The home page displays information on the status of the device, operation panel usage, and consumables, to the right of the page. This page allows you to quickly verify the device's current settings and statuses.

**Status Displays**

Shows the operating status of the printer, scanner, and/or FAX.

**Operation Panel Usage**

Shows the user currently logged in to the device from the operation panel and its operating status. Note that settings made using the operation panel may override those made using the embedded server.

**Paper**

Shows the size, type, maximum capacity, and the current supply by paper source.

**Toner**

Shows the toner supply by color. The status of the waste toner box is also shown.

**Optional Equipment Status**

Shows the status of the optional devices, such as the amount of the remaining staples and the punch waste.

**Information**

Shows the message type, title and date modified when the Message Board is set to On and the new message is described.

---

## 3 About Login

This section provides information to help the administrator manage domain and local users. The administrator can set authentication that allows the predefined users to access the embedded server pages and set administrator passwords.

### Levels of Login

An administrator can configure the device to require a user login before it is accessed, in either of three different ways of authentication as described in this section.

If you select local or network authentication, User Login must be turned on.

The default user name and password, or the local administrator account when User Login is turned off, is Admin.

#### Local Authentication

Users are registered in this device and one-to-one authentication is performed between this printing system and a PC. A local account user accesses the embedded server by entering a **User Name** and **Password** and selecting **Local** in the drop-down list (if shown) below the entries, followed by clicking the **Login** button.

A user logged in with administrator privileges can gain access to **My Information**, **Device Information**, **Job Status**, **Document Box**, **Address Book**, **Device Settings**, **Function Settings**, **Network Settings**, **Security Settings**, **Management Settings**, and **Links** on the navigation menu.

A user logged in with a general user account cannot add or delete document boxes, nor view the **Address Book**, **Device Settings**, **Function Settings**, **Network Settings**, **Security Settings**, and **Management Settings**.

To add, delete or configure a locally authenticated user, see *Authentication* on page 74.

#### Network Authentication

If the device is configured for network authentication, the device and the relevant PC's need to be under the management of a Windows domain network. Enter a **User Name** and **Password** and select the domain you want to login to in the drop-down list.

A user logged in with administrator privileges can gain access to **My Information**, **Device Information**, **Job Status**, **Document Box**, **Address Book**, **Device Settings**, **Function Settings**, **Network Settings**, **Security Settings**, **Management Settings**, and **Links** on the navigation menu.

A user logged in with a general user account cannot add or delete document boxes, nor view the **Address Book**, **Device Settings**, **Function Settings**, **Network Settings**, **Security Settings**, and **Management Settings**.

To add, delete or configure a network authenticated user, see *Authentication* on page 74.

## Authentication Using Job Account ID

If the device is configured for job accounting but not for **User Login**, a user can be authenticated by his/her job account ID. Enter the job account ID in **Account Login** and click **Login**.

Note: If a user is registered as an Administrator on the **Local User List**, click **Admin Login**. Enter a **User Name** and **Password** and click the **Login** button.

For access using a job account ID, **My Information**, **Device Information**, **Job Status**, **Document Box**, **Address Book**, and **Links** are displayed in the navigation menu.

## 4 Document Box

This page is accessible when you have logged in using a general user or administrator account. It allows you to add or delete a document box, as well as deleting documents in a document box. A general user is not allowed to add or delete a document box.

There are several types of document boxes, which vary depending on models: **Custom Box**, **FAX Box**, **Sub Address Box**, **Polling Box**, and **Job Box Settings** as described below. Note that **FAX Box**, **Sub Address Box**, and **Polling Box** are available only if the device is equipped with a FAX kit.

The users with a general user account can delete the documents which were created and added in their own document boxes.

### Custom box

The section below explains how to add, edit or delete custom boxes as well as working with their contents.

#### Adding a New Custom Box

1. Click **Custom Box** under **Document Box** on the navigation menu. The **Custom Boxes** page opens.
2. Click **Add** icon. The **New Box - Property** page will open.
3. Make entries required to define the custom box, such as **Number**, **Name**, etc.
4. Click **Submit** button.

#### Editing a Custom Box

1. Click **Custom Box** under **Document Box** on the navigation menu. The **Custom Boxes** page opens.
2. Select the custom box you want to edit by clicking on its Number or Box Name. The documents contained in the Custom Box are displayed with its name, date of creation, size, etc. You can choose **List View** or **Thumbnail** to view the box contents.

Alternatively, you can open the list of the user boxes, directly enter the box number in the **Box #** window and click **Go to**, or enter the box name in the **Box Name** window and click the magnifying glass icon, to quickly search the custom box.

3. Click **Box Property**. The **Property** page will appear.
4. Make entries required to modify the custom box properties such as Number, Name, etc.
5. Click **Submit** button.

#### Working with a Custom Box

You can delete, move, copy, join, download, E-mail or print documents in the custom box.

First select the document to apply any of the above actions by following the steps below:

1. Click **Custom Box** under **Document Box** on the navigation menu. The **Custom Boxes** page opens.
2. Select the custom box you want to work with by clicking on its Number or Box Name. If the box is password-protected, enter the password. The documents contained in the Custom Box are displayed with its name, date of creation, size, etc. You can choose **List View** or **Thumbnail** to view the box contents.

Alternatively, you can open the list of the user boxes, directly enter the box number in the **Box #** window and click **Go to**, or enter the box name in the **Box Name** window and click the magnifying glass icon, to quickly search the custom box.

3. In the custom box, select the check box next to the name of the document that you want to apply the action. You can select more than one document simultaneously.

#### Deleting a Document

1. Select the document to delete as described above.
2. Click **Delete** icon.

#### Moving a Document from Box to Box

1. Select the document to move as described above.
2. Click **Move** icon. The **Move Settings** page opens. The selected file is shown in **Selected Files**.
3. Select the box to move the document to in **Destination**. If the box is password-protected, enter the password.
4. Click **Move** button. The document is moved to the box.

#### Copying a Document from Box to Box

1. Select the document to copy as described above.
2. Click **Copy** icon. The **Copy Settings** page opens. The selected file is shown in **Selected Files**.
3. Select the box to store the copied document in **Destination**. If the box is password-protected, enter the password.
4. Click **Copy** button. The document is copied into the box.

#### Joining Documents in One

1. Select the documents to join as described above.
2. Click **Join** icon. The **Join Settings** page opens. The selected file is shown in **Selected Files (Join Order)**.
3. If desired, change the order of the documents to be joined by clicking **Top**, **Up**, **Down**, and **Bottom**. You can exclude a document from the **Selected Files (Join Order)** list by clicking **Delete**.
4. Name the new document which the documents selected are joined in **File Name**.
5. Click **Join** button. The documents are joined in the new document.

### Downloading a Document to a PC

1. Select a document you want to download and store into your PC as described above. You can download only one document at a time.
2. Click **Download** icon. The Download Settings page opens. The selected file is shown in **Selected Files**.  
  
If you want to download the selected page in a file, click **Settings** in **Selected Files**. After selecting the desired pages, click **Submit** button.
3. Use the **Color Selection** drop-down list if you want to change the color of the document after downloading. For example, you can download a color document as a monochrome document when it is stored in a PC.
4. Use the **File Format** drop-down list to select the type of the document you want to send.
5. Click **Download** button to begin downloading. Enter the name and destination of the document as you are prompted.

Note: If downloading is interrupted by the web browser's pop-up blocking, perform the following:

- For example, on Internet Explorer 8, go to **Tools > Pop-up Blocker > Turn Off Pop-up Blocker** to turn off pop-up blocking. Or, go to **Pop-up Blocker Settings** and enter the print system's IP address in **Allowed sites**.
- If pop-up blocking is still engaged, on Internet Explorer 8, go to **Tools > Internet Options > Security > Custom level > Downloads > Automatic prompting for file downloads** and select **Enable**.
- If downloading won't complete, try to turn off SmartScreen Filter by browsing to **Safety > SmartScreen Filter > Turn Off SmartScreen Filter** on Internet Explorer 8.

### Sending a Document to a Destination

1. Select a document you want to send as described above. You can send only one document at a time.
2. Click **Send** icon. The **Send Settings** page opens. The selected file is shown in **Selected Files**.
3. In **Destination**, select a destination from **Address Book**, **E-mail**, **Folder**, **FAX** and **i-FAX**.

To select a destination, select **Address Book** to display the destinations currently registered (depending on **E-mail**, **Folders**, **FAX**, **i-FAX**, or **Groups**). Note, however, only **Address Book** is displayed if the entry of new addresses is prohibited in the device's system menu.

To delete a destination from **Destinations**, click **Delete** icon. If you want to print the selected page in a file, click **Settings** in **Selected Files**. After selecting the desired pages, click **Submit** button.

4. Use the **Color Selection** drop-down list if you want to change the color of the document to send. For example, you can send a color document as a monochrome document.
5. Name the document in **File Name**.
6. Enter the date of sending and job ID in **Additional Information**. These entries are appended in the file name.

7. Use the **File Format** drop-down list to select the type of the document you want to send.
8. Click **Send** button. If you are prompted to confirm sending, in case **Confirmation** Screen is activated on the device's operation panel, make confirmation. The document is sent to the destination.

#### Printing a Document

1. Select the document(s) to print as described above.
2. Click **Print** button. The **Print Settings** page opens. The selected file is shown in **Selected Files (Print Order)**.
3. If desired, change the order of the documents to be joined by clicking **Top**, **Up**, **Down**, and **Bottom**. You can exclude a document from the **Select Pages (Print Order)** list by clicking **Delete**.

If you want to print the selected page in a file, click **Settings** in **Selected Pages to Process**. After selecting the desired pages, click **Submit** button.

4. Enter the number of copies to print in **Copies**. When clicking **Delete after Print**, the document is deleted after printing.
5. Use the **Paper Selection** drop-down list if you want to change the paper source.
6. Use the **Color Selection** drop-down list if you want to change the color of the document when it is printed.
7. In **Functions**, change settings for **Duplex**, **Combine**, **EcoPrint**, and **Toner Save Level** as desired.
8. Click **Print** button. The document is printed.

#### Deleting a Custom Box

1. Click **Custom Box** under **Document Box** on the navigation menu. The **Custom Boxes** page opens.
2. Click **Delete** icon once. This will not delete any custom box yet, but this will let the checkboxes (**Select**) appear to the left.
3. Select the custom box you want to delete by selecting the checkbox to the left. You can select only one custom box to delete at a time.
4. You can enter the box name in the **Box Name** window and click the magnifying glass icon to quickly search the custom box.
5. Click **Delete** icon.

## FAX Box

The section below explains how to add, edit or delete FAX boxes as well as working with their contents.

#### Adding a New Fax Box

1. Click **Fax Box** under **Document Box** on the navigation menu.
2. Click **Add** icon. The **New Box** page opens.

3. Enter the property such as **Number** and **Box Name**.
4. Click **Submit** button.

### Editing a Fax Box

1. Click **Fax Box** under **Document Box** on the navigation menu.
2. Select the FAX box you want to edit by clicking on its **Number** or **Box Name**. The documents contained in the FAX Box are displayed with its name, date of creation, size, etc. You can choose **List View** or **Thumbnail** to view the box contents.

Alternatively, you can directly enter the box number in the **Box #** window and click **Go to**, or enter the box name in the **Box Name** window and click the magnifying icon, to quickly search the FAX Box.

3. Click **Box Property**. The **Property** page will appear.
4. Make entries required to modify the FAX Box properties such as Number, Name, etc.
5. Click **Submit** button.

### Working with a FAX Box

1. Click **Fax Box** under **Document Box** on the navigation menu.
2. Select the FAX Box you want to work with by clicking on its **Number** or **Box Name**. If the box is password-protected, enter the password. The documents contained in the FAX Box are displayed with its name, date of creation, size, etc. You can choose **List View** or **Thumbnail** to view the box contents.

Alternatively, you can directly enter the box number in the **Box #** window and click **Go to**, or enter the box name in the **Box Name** window and click the magnifying icon, to quickly search the FAX Box.

3. In the FAX Box, select the check box next to the name of the document that you want to apply the action. You can select more than one document simultaneously.
4. Select either of **Delete**, **Download**, and **Print** to apply to the document. To perform either of these actions, follow the same procedure as described in *Custom box* on page 9.

### Deleting a FAX Box

1. Click **Fax Box** under **Document Box** on the navigation menu. The **FAX Boxes** page opens.
2. Click **Delete** icon. This will not delete any FAX box yet, but this will let the checkboxes (**Select**) appear to the left.
3. Select the FAX Box you want to delete by selecting the check box to the left. You can select only one FAX box to delete at a time. You can enter the box name in the **Box Name** window and click the magnifying glass icon to quickly search the custom box.
4. Click **Delete** icon once. If required, enter the password and click **OK**.

## Sub Address Box

The section below explains how to add, edit or delete sub address boxes as well as working with their contents.

### Adding a New Sub Address Box

1. Click **Sub Address Box** under **Document Box** on the navigation menu. The **Sub Address Boxes** page opens.
2. Click **Add** icon and enter descriptions for the sub address box.
3. Click **Submit** button.

### Editing a Sub Address Box

1. Click **Sub Address Box** under **Document Box** on the navigation menu. The **Sub Address Boxes** page opens.
2. Select the Sub Address Box you want to edit by clicking on its **Number** or **Box Name**. The documents contained in the Sub Address Box are displayed with its name, date of creation, etc.

Alternatively, you can directly enter the box number in the **Box #** window and click **Go to**, or enter the box name in the **Box Name** window and click the magnifying icon, to quickly search the Sub Address Box.

3. Click **Box Property**. The **Property** page will appear.
4. Make entries required to modify the Sub Address Box properties such as Number, Name, etc.
5. Click **Submit** button.

### Working with a Sub Address Box

1. Click **Sub Address Box** under **Document Box** on the navigation menu. The **Sub Address Boxes** page opens.
2. Select the Sub Address Box you want to work with by clicking on its **Number** or **Box Name**. If the box is password-protected, enter the password. The documents contained in the Sub Address Box are displayed with its name, date of creation, etc.

Alternatively, you can directly enter the box number in the **Box #** window and click **Go to**, or enter the box name in the **Box Name** window and click the magnifying icon, to quickly search the Sub Address Box.

3. In the Sub Address Box, select the check box next to the name of the document that you want to apply the action. You can select more than one document simultaneously.
4. Select either of **Delete** or **Print** to apply to the document. To perform either of these actions, follow the same procedure as described in p.9.

### Deleting a Sub Address Box

1. Click **Sub Address Box** under **Document Box** on the navigation menu. The **Sub Address Boxes** page opens.

2. Click **Delete** icon once. This will not delete any Sub Address Box yet but this will let check boxes (**Select**) appear to the left.
3. Select the Sub Address Box you want to delete by selecting the check box to the left. You can select only one box to delete at a time. You can enter the box name in the **Box Name** window and click the magnifying glass icon to quickly search the box.
4. Click **Delete** icon once. If required, enter the password and click **OK**.

## Polling Box

This page allows you to print or delete documents in polling boxes. Also, you can determine whether documents are automatically deleted or retained after polling.

### Polling Box Property

**Polling Box** Property determines after the document has been sent, whether you want the document to be automatically deleted or to be retained (overwritten).

1. Click **Polling Box** under **Document Box** on the navigation menu. The **Polling Box** page opens.
2. Click **Box Property**. The **Polling Box - Property** opens to select whether the document which was sent is deleted, or overwritten and retained.
3. To configure the box so that documents are overwritten at updating, set **Overwrite Setting** to **On**. To configure the box so that documents are automatically deleted after transmission, set **Delete after Transmit** to **On**.
4. After confirming the settings, click **Submit** button.

### Deleting Documents in Polling Box

To delete documents in a polling box, proceed as follows:

1. Click **Polling Box** under **Document Box** on the navigation menu. The **Polling Box** page opens. You can choose **List View** or **Thumbnail** to view the box contents. To view details on a document in the polling box, click its **Name**. The **Property** page opens and you can view the number of pages, resolution, etc. You can also change the file name by clicking **Change File Name** or preview by clicking **Preview** on this page.
2. Select the document(s) you want to delete by selecting the check box to the left. You can select more than one check box to delete the documents simultaneously.
3. Click **Delete** icon once.

### Printing Documents in Polling Box

To print documents in a polling box, proceed as follows:

1. Click **Polling Box** under **Document Box** on the navigation menu. The **Polling Box** page opens. You can choose **List View** or **Thumbnail** to view the box contents. To view details on a document in the polling box, click its **Name**. The **Property** page opens and you can view the number of pages, resolution, etc. You can also change the file name by clicking **Change File Name** or preview by clicking **Preview** on this page.
2. Select the document(s) you want to print by checking the checkbox to the left. You can select more than one checkbox to print the documents in succession.

3. Click **Print** button. The **Basic** submenu will open.
4. You can immediately start to print the documents in the order shown in **Selected Files** by clicking **Print**. If you want to change the order of printing, highlight a document and press **Top**, **Up**, etc. If you want to omit a document from the list, click **Delete** icon.
5. Click **Print** button.

## Job Box Settings

The section below explains how to change the number of Quick Copy jobs and set automatic delete times for temporary jobs in Job Box. Also, you can determine whether documents are automatically deleted or retained after printing.

1. Click **Job Box Settings** under **Document Box** on the navigation menu. The **Job Box Settings** page opens.
2. Enter the value in **Quick Copy Job Retention**. You can select Quick Copy jobs from 0 to 300.
3. Enter the value in **Repeat Copy Job Retention**. You can select Quick Copy jobs from 0 to 50.
4. To delete automatically the temporary retained jobs after printing, select **1 hour**, **4 hours**, **1 day**, or **1 week** on the **Deletion of Job Retention** drop-down list. If you do not want to delete the jobs after printing, select **Off** on the **Deletion of Job Retention** drop-down list.
5. After confirming the settings, click **Submit** button.

---

## 5 Address Book

This page is accessible when you have logged in using a general user or administrator account.

Address Book contains **Machine Address Book** and **External Address Book**. You can also specify the address quickly by assigning it to the **One-Touch key**.

### Machine Address Book

This section explains you to add, edit or delete contacts in the machine address book.

#### Contacts

This subsection explains how to add, edit or delete contacts in the machine address book.

In the **Addresses** page, contacts and groups are listed together. Contacts are identified by the single person icon and groups by the triple person icon. You can filter to display only the contacts or groups by choosing **Contact** or **Group** on the **Type** drop-down list.

#### Adding a New Contact

1. Click **Machine Address** under **Address Book** on the navigation menu. The **Addresses** page opens.
2. Click **Add** icon. The **New Contact - Property** page opens.
3. Enter the contact's **Number**, **Name** and **E-mail**.

You can also enter SMB and FTP access information for the contact including a shared folder accessible from Microsoft Windows Network. Specify **Host Name**, **Port Number**, **Path** to the shared folder, **Login User Name**, and **Login Password** for the contact. When the **Test** button is pressed, this machine tries to connect to the SMB or FTP server.

If you use the host name, you must first specify the DNS server information.

If the FAX system is installed or i-FAX is activated in the system, you can include a FAX number and/or i-FAX address.

4. Click **Submit** button. To cancel, click **Back** button.

#### Editing a Contact

The steps below allow you to modify the number or name, e-mail address, SMB and FTP information, FAX and i-FAX settings of a contact.

1. Click **Machine Address** under **Address Book** on the navigation menu. The **Addresses** page opens.
2. Click the contact's **Number** or **Name** you want to edit. The **Property** page appears.

Alternatively, you can directly enter the address number in the **Address #** window and click **Go to**, or enter the address name in the **Address Name** window and click the magnifying icon, to quickly search the contact.

3. Modify **Number**, **Name**, or **E-mail** of the contact. If the system is installed with a FAX system or has i-FAX activated, you can modify these settings.
4. Modify the settings for SMB and FTP accesses as desired. When the **Test** button is pressed, this machine tries to connect to the SMB or FTP server.
5. Click **Submit** button. To cancel, click **Back** button.

### Deleting a Contact

1. Click **Machine Address** under **Address Book** on the navigation menu. The **Addresses** page opens.  
Select the contact(s) you want to delete by selecting the checkbox to the left.
2. If you want all contacts displayed on the page deleted, click **Check All** icon. To deselect all, click **None** icon.
3. Click **Delete** icon once.

### Adding a New Group

1. Click **Machine Address** under **Address Book** on the navigation menu. The **Addresses** page opens.
2. Click **Add Group** button. The **New Group - Property** page opens.
3. Enter the group's **Number**, or leave it to the system to automatically assign a number, and the group's **Name**.
4. Add contacts to the group by clicking the **Add** icon. The **Addresses** page appears.
5. Select the contact to join the group by checking the **Select** checkbox to the left. You can select more than one document simultaneously. Note that the contacts to join must already have been existent on the **Addresses** page.
6. Click **Submit** button. You are returned to the **Property** page. To delete a contact, click the **Delete** icon.
7. Click **Submit** button. Repeat the above steps to add more groups.

### Edit Group

1. Click **Machine Address** under **Address Book** on the navigation menu. The **Addresses** page opens.
2. Click the group's **Number** or **Name** you want to edit. The **Property** page of the group opens.

Alternatively, you can directly enter the address number in the **Address #** window and click **Go to**, or enter the address name in the **Address Name** window and click the magnifying icon, to quickly search the group.

3. Modify the group's **Number** and **Name** as desired.
4. Add contacts to the group by clicking the **Add** icon. The **Addresses** page appears.

5. Select the contact to join the group by checking the **Select** checkbox to the left. You can select more than one document simultaneously.

You can filter contacts by selecting **E-mail**, **Folder**, **FAX**, or **i-FAX** on the **Type** drop-down list.

6. Click **Submit** button to add the contacts. You are returned to the **Property** page.

To delete a contact, click **Delete** icon.

### Delete group

1. Click **Machine Address** under **Address Book** on the navigation menu. The **Addresses** page opens.

2. Select the group(s) you want to delete by selecting the check box to the left.

If you want all groups displayed on the page deleted, click **Check All** icon. To deselect all, click **None** icon.

Note: Deleting a group does not delete the contacts joined in the group.

3. Click **Delete** once. To cancel, click **Back** button.

## External Address Book Settings

This section explains how to use the external address book.

1. Click **External Address Book Settings** under **Address Book** on the navigation menu. **External Address Book Settings** page opens.
2. Confirm that **LDAP** is set to **On**. If the **LDAP** is **Off**, make settings in **Protocol**.
3. Select the desired external address book(s), click **On** or **Off**.
4. After confirming the settings, click **Submit** button.

## One Touch Key

This section explains how to register the address to the One Touch key.

### Registering a new One Touch key

1. Click **One Touch Key** under **Address Book** on the navigation menu. **One Touch Key List** opens.
2. Click **Settings** of the One Touch Key which you want to register. The **One Touch Key Property** page opens.
3. Enter the **Display Name** and **Destination** in the **One Touch Key Property**. You can call the address registered in the Address Book by clicking **Address Book**. You can select the type of addresses using the **Type** drop-down list in the **Addresses** page.

Click **No.** or **Name** of the address you want to register. The address name and the property information are shown. Select the contact you want to register by checking the radio button to the left. You can check only one contact to assign at a time.

You can enter the address name in the **Address Name** window and click the magnifying glass icon to quickly search the contact.

4. After confirming the settings, click **Submit** button.

#### Edit one touch key

1. Click **One Touch Key** under **Address Book** on the navigation menu. **One Touch Key List** opens.
2. Enter the key number in the **Key #** windows and click **Go to**. The **Property** page appears.
3. Make entries required to modify the Display Name and the Destination.
4. After confirming the settings, click **Submit** button.

#### Delete One Touch Key

1. Click **One Touch Key** under **Address Book** on the navigation menu. **One Touch Key List** opens.
2. Click **Delete** of the One Touch Key which you want to delete.

## 6 Device Settings

This page is accessible when you have logged in the embedded server with administrator privilege, while network authentication or local authentication is enabled.

If prompted, configure the following settings. See the sections below for detailed information.

- Paper/Feed/Output
- Original Document
- Energy Saver/Timer
- Date/Time
- System

### Paper/Feed/Output

This section includes settings that apply to paper size and media type for the paper loaded in the MP tray and the cassettes, configuring cassette group, paper output, and the other detailed properties.

#### Cassette Settings

1. Click **Paper/Feed/Output** under **Device Settings** on the navigation menu. The **Paper/Feed/Output Settings** page opens.
2. Configure the paper size and media type for each cassette.
3. After confirming the settings, click **Submit** button.

#### MP Tray Settings

1. Click **Paper/Feed/Output** under **Device Settings** on the navigation menu. The **Paper/Feed/Output Settings** page opens.
2. Configure the paper size and media type for MP Tray.
3. After confirming the settings, click **Submit** button.

#### Group Settings

1. Click **Paper/Feed/Output** under **Device Settings** on the navigation menu. The **Paper/Feed/Output Settings** page opens.
2. Select the cassette(s) corresponding to your desired group arrangement.
3. After confirming the settings, click **Submit** button.

#### Paper Output Settings

1. Click **Paper/Feed/Output** under **Device Settings** on the navigation menu. The **Paper/Feed/Output Settings** page opens.

2. Configure the default output tray. You can change the output tray for **Copy/Custom Box**, **Printer** and **FAX** respectively.
3. After confirming the settings, click **Submit** button.

### Other Settings

1. Click **Paper/Feed/Output** under **Device Settings** on the navigation menu. The **Paper/Feed/Output Settings** page opens.
2. You can configure the following settings.

#### Default Paper Source

You can select the cassette or MP Tray feed the paper with priority.

#### Paper Selection

You can select Auto or Default Paper Source by clicking the drop-down list.

#### Auto Paper Selection

You can select Most Suitable Size or Same as Original Size by clicking the drop-down list.

#### Special Paper Action

You can select Adjust Print Direction or Speed Priority by clicking the drop-down list.

#### Media for Auto (Color)

You can select the media type when Auto is selected in Paper Selection for color printing.

#### Media for Auto (B&W)

You can select the media type when Auto is selected in Paper Selection for black and white printing.

#### Paper Source for Cover

You can select the cassette or MP Tray feed the cover.

#### Paper Size for Small Original

You can select Default Paper Size or the paper size by clicking the drop-down list when an original of a small size, such as a card, which the scanner cannot detect is printed.

#### Offset One Page Documents

You can select whether offset stacking (**On**) or not (**Off**) when printing documents comprised of only one page.

#### Offset Documents Each Job

You can select whether offset stacking (**On**) or not (**Off**) when printing documents comprised of each job.

3. After confirming the settings, click **Submit** button.

## Paper Detail Settings

1. Click **Paper/Feed/Output** under **Device Settings** on the navigation menu. The **Paper/Feed/Output Settings** page opens.
2. Click **Settings** in **Paper Detail Settings**. The **Paper Details Settings** page opens.

You can configure the following settings.

### Custom Page Size Settings

You can select whether change the size of Custom Paper (**On**) or not (**Off**). When you want to change the settings, enter the length (**X**) and width (**Y**) of the Custom Paper.

### Media Type Settings

You can select the paper weight for each media type by clicking the drop-down list. When you select the Custom 1 to 8, you can select the paper weight as well as specifying whether or not to use duplex printing and entering the custom paper name.

3. After confirming the settings, click **Submit** button.

## Original Document

This section explains how to configure the original.

### Original Auto Detect

1. Click **Original Document** under **Device Settings** on the navigation menu. The **Original Document** page opens.
2. This setting specifies the auto detection of the original. You can select A6 or Hagaki for A6/Hagaki and On (auto detection) or Off for Folio and 11 x 15".
3. After confirming the settings, click **Submit** button.

### Custom Original Size

1. Click **Original Document** under **Device Settings** on the navigation menu. The **Original Document** page opens.
2. Select **On** or **Off** for each Custom Original (1 to 4). When you want to change the settings, enter the length (**X**) and width (**Y**) of the Custom Paper.
3. After confirming the settings, click **Submit** button.

## Energy Saver/Timer

This section explains how to configure the Energy Saver Settings and Timer Settings.

### Energy Saver Settings

1. Click **Energy Saver/Timer** under **Device Settings** on the navigation menu. The **Energy Saver/Timer Settings** page opens.
2. You can configure the following settings.

### Sleep Level

Select **Quick Recovery** or **Energy Saver**. Even if you selected either sleep level, the machine can recover from the sleep mode when you press any key on the operation panel or the machine received the print or fax job.

**Quick Recovery** recovers from the sleep mode faster than Energy Saver.

**Energy Saver** reduces power consumption even more than **Quick Recovery**, and allows sleep mode to be set separately for each function. The time required for the machine to wake up from the sleep mode and resume normal operation will be longer than for **Quick Recovery**.

Alternatively, on some models, the **Sleeping** page appears on the embedded web server while the system is engaged in Energy Saver. You can click **Start** on the **Sleeping** page.

### Sleep Rule

If you have selected Energy Saver mode of sleeping, click **On** of the appropriate radio button for the interface or device you would like to engage in Energy Saver. Click **Off** if you do not want to engage Energy Saver for the interface or device. For example, if you want the print data received by the network interface always to wake the machine to continue printing, click **Off** next to **Network**.

### Auto Sleep

Click **Settings** button to open the **Auto Sleep Settings** page. Click **On** if you want to use Auto Sleep and click **Submit** button.

### Sleep Timer

Specify the time period in the drop-down list, from 1 to 240 minutes, after that time period the system enters Auto Sleep Mode.

### Low power Timer

Specifies the time from 1 to 240 minutes after which the system enters the low power mode, where it reduces the power consumption.

### Energy Saver Recovery Level

Select **Full Recovery**, **Normal Recovery**, or **Power Saving Recovery**.

3. After confirming the settings, click **Submit** button.

## Set Timer

1. Click **Energy Saver/Timer** under **Device Settings** on the navigation menu. The **Energy Saver/Timer Settings** page opens.
2. This page allows the following settings:

### Auto Panel Reset

Configures the panel to be automatically reset. Activate this setting to open **Panel Reset Timer** and specify the time between 5 and 495 seconds after that the panel will be automatically reset.

### Interrupt Clear Time

This determines the time period before the machine reverts to normal mode, after the interrupt copy mode has been engaged. The range is 5 to 495 seconds.

#### WSD scan timer

This determines the time period before the machine reverts to normal mode, after WSD scan mode has been engaged. The range is 10 to 495 seconds (in 5-second increments).

#### Weekly timer

This page allows the following settings: Activate or deactivate this setting. To make advanced settings, click **Settings**. The **Weekly Timer Settings** page appears. In **Schedule**, set to turn power on or off for each day of the week. Enter time for activation. To set the time of retries, specify the limit of retries in **Retry Times** and enter a value in **Retry Times** and **Retry Interval**.

#### Auto File Deletion Time(Custom Box)

Set the time to automatically delete stored documents in the Custom Box.

3. After confirming the settings, click **Submit** button.

## Date/Time

This section includes advanced settings on date and time.

### Date/Timer Settings

1. Click **Date/Time** under **Device Settings** on the navigation menu. The **Date/Time Settings** page opens.

The following items are displayed:

#### Current Local Time

Displays the time that is currently set in the machine.

#### Current Universal Time (UTC/GMT)

Displays the Greenwich Mean Time that is currently set in the machine.

2. Make changes in the settings if needed.

Select **Date**, **Year**, **Month**, **Day**, **Time**, **Date Format**, or **Time Zone**, which you want to make a change.

3. After confirming the settings, click **Submit** button.

### Synchronize

1. Click **Date/Time** under **Device Settings** on the navigation menu. The **Date/Time Settings** page opens.

2. Make changes in the settings if needed.

If a time server is used to synchronize the time as well, the current time can be adjusted regularly and easily. Enter the host name or IP address of the time server and click the **Synchronize** button.

If you use the host name, you must first specify the DNS server information.

Time information is required when you receive reports from this machine via E-mail. It is recommended that you set the time when the report mail function is enabled.

3. Click **Submit** button.

## System

This section includes advanced settings that apply to the system.

If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

### Device Information

1. Click **System** under **Device Settings** on the navigation menu. The **System Settings** page opens.
2. Make changes in the settings if needed.  
Enter **Host Name**, **Asset Number**, and **Location**, accordingly.  
If you use the host name, you must first specify the DNS server information.
3. Click **Submit** button.

### General

1. Click **System** under **Device Settings** on the navigation menu. The **System Settings** page opens.
2. Make changes in the settings if needed.

#### Language

Select the language.

#### Software Keyboard Layout

Select an appropriate type of keyboard.

#### USB keyboard type

Select an appropriate type of USB keyboard.

#### Override A4/Letter

Specifies whether or not the A4 and Letter size paper should be interchangeable. When turned **On**, for example, if the A4 paper is not in the tray, the Letter size paper will be selected for printing. When turned **Off**, the Letter size paper will not be used in place of the A4 paper, when A4 is selected for printing but the A4 tray is empty.

#### Measurement

Select the unit of measurement for entry.

#### Preset Limit

Specify the number of copies limited to print.

### Default Screen

Select the screen to set as the default screen.

### Default screen for Send/FAX

Select the screen to set as the default screen.

### Address Book Type

Select the type of addressbook to set.

### Orientation Confirmation

Activate or deactivate the prompt that confirms the orientation of original documents.

3. Click **Submit** button.

## Error Settings

1. Click **System** under **Device Settings** on the navigation menu. The **System Settings** page opens.
2. Make changes in the settings if needed.

### Action when color toner is empty

Select the action when color toner is empty, whether you want to cancel printing or print forcibly in black and white mode.

### MP tray empty

Activate or deactivate the attention display when the MP tray has become empty.

### Error Clear Timer

Activate or deactivate automatic error clearing at an error. If activated, printing will automatically resume after the time period that you can specify from 5 to 495 seconds.

### Skip Error Job

Activate or deactivate automatic job skipping at an error. If activated, printing will automatically resume by skipping the job in error after the time period that you can specify from 5 to 90 seconds.

### Low Toner Alert Level

Activate or deactivate the attention display when toner is running low. If activated, the attention display will appear in a relative amount of remaining toner that you can specify from 5 to 100.

### Default Paper Source

Displays this item when a large capacity feeder is installed and selected as a default paper source from **Default Paper Source** of **Other Settings** in **Paper/Feed/Output** page.

3. Click **Submit** button.

## 7 Function Settings

This page is accessible when you have logged in the embedded server with administrator privilege, while network authentication or local authentication is enabled. If needed, make the following settings: See below for detailed information.

- Common/Job Default
- Copy
- Printer
- E-mail
- Sending Job - Folder
- DSM Scan
- FAX/i-FAX
- Send and Forward
- RX/Forward Requirements
- Operation Panel

### Common/Job Default

In this section, you can make settings for the following items:

#### Common Settings

1. Click **Common/Job Defaults** under **Function Settings** on the navigation menu. The **Common/Job Default Settings** page opens.
2. Make changes in the settings if needed.

#### Priority Setting

Activate or deactivate automatic zooming with priority.

#### OCR Text Recognition Action

You can select this item when the optional Scan Extension kit (A) is activated.

#### High comp. PDF image

You can prioritize to ensure smaller file sizes or better quality text representation in high-compression PDF format.

3. Click **Submit** button.

#### Job Default Settings

1. Click **Common/Job Defaults** under **Function Settings** on the navigation menu. The **Common/Job Default Settings** page opens.
2. You can make changes for the following items as required.

#### Document name

Name the default document used in the print job.

Additional Info.

Select the date, job number, etc.

3. Click **Submit** button.

### Initial Scan Settings

1. Click **Common/Job Defaults** under **Function Settings** on the navigation menu. The **Common/Job Default Settings** page opens.
2. You can make changes for the following items as required.

#### Original orientation

You can align the top edge of the document to the top or to the left.

#### Color selection (Send/Store)

This selects color mode for scanning or storing. **Auto Color (Color/Grayscale)** and **Auto Color (Color/Black & White)** allow you identify color for the original document to scan. You can manually select **Black & White** to forcedly switch color mode.

#### Scan Resolution

Specifies the resolution for scanning. The resolutions available differ depending on the model, current color mode, and the saving format of files. To scan in full color or grayscale with a solution of 400 dpi or greater, the internal memory must be expanded for some models.

#### Copy - Original Image

The original quality for scanning or storing must be selected according to the type of the original. Select from **Text+Photo (Printer)**, **Text+Photo (Magazine)**, **Photo (Printer)**, **Photo (Magazine)**, **Photo (Photo Paper)**, **Text**, **Text (Fine Line)**, **Graphic/Map (Printer)**, and **Graphic/Map (Magazine)**.

Note: You can select Color table from the drop-down list when it is downloaded.

#### Original image (Send/Store)

The original quality for scanning or storing must be selected according to the type of the original. Switch the original quality from **Text+Photo**, **Photo**, **Text**, and **Text (for OCR)**.

#### Zoom %

This switches the zoom ratio between **Auto** and **100%**. The default setting is **100%**.

#### Background Density (Copy)

This removes dark background from originals, such as newspapers, when copying.

#### Background Density (Send/Store)

This removes dark background from originals, such as newspapers, when sending or storing a job.

#### Continuous Scan

Activates or deactivates Continuous Scan for scanning.

### Continuous Scan (Fax)

Activates or deactivates Continuous Scan for fax.

### Border Erase

Set the width of the outer and inner borders to erase in 0 to 50mm. You can set border erase for the reverse side.

### Prevent Bleed-through (Copy)

Activate or deactivate Prevent Bleed-through for copying.

### Prevent Bleed-through (Send/Store)

Activate or deactivate Prevent Bleed-through for sending and storing.

3. Click **Submit** button.

## Default Output Settings

1. Click **Common/Job Defaults** under **Function Settings** on the navigation menu. The **Common/Job Default Settings** page opens.
2. You can make changes for the following items as required.

### EcoPrint

Switches EcoPrint **On** or **Off** to control toner consumption for saving the printing costs. The default setting is **Off**. When selecting **On**, you can select **Toner Save Level** from **1 (Low)** to **5 (High)**.

### Margin

You increase or decrease the top and left gutters from -18 to +18mm.

### JPEG/TIFF Print

This determines the physical size of JPEG images when printing them from a USB flash device. Choices include **Fit to Paper Size**, **Image Resolution**, and **Fit to Print Resolution**.

### XPS Fit to Page

This determines the page size for printing XPS data. Turn **On** to fit print data over the page size and turn **Off** to print in the original size.

### Collate/Offset

Select the default collate/offset settings. When **Collate** is set to **On**, the documents are collated by copy (**Offset** is set to **Each Set**). When **Collate** is set to **Off**, the documents are collated by page (**Offset** is set to **Off**).

### FAX TX Resolution

This selects the resolution to fax a document.

### E-mail Template

This allows to create a template for entering a subject and body information of E-mail. Up to three templates can be created and configured with the default settings.

### i-FAX Template

This allows to create a template for entering a subject and body information for i-FAX.

3. Click **Submit** button.

### Color Default Settings

1. Click **Common/Job Defaults** under **Function Settings** on the navigation menu. The **Common/Job Default Settings** page opens.
2. You can make changes for the following items as required.

#### Color Selection (Copy)

This selects color mode for copying. **Auto Color** automatically identifies a full color or black and white original. You can manually select either **Full Color** or **Black & White** to forcedly switch color mode.

#### Auto Image Rotation

Activate or deactivate automatic image rotation mode.

#### DP Read Action

You can prioritize to use the document processor either in faster scanning or better quality scanning.

#### Repeat Copy

Enables additional copies in the desired quantity as necessary after a copy job is completed.

Note: **Repeat Copy** is not displayed when an optional Data Security Kit is activated or a Repeat Copy job is cleared.

#### Skip Blank Page

You can choose whether blank pages should be delivered or not.

3. Click **Submit** button.

### File Default Settings

1. Click **Common/Job Defaults** under **Function Settings** on the navigation menu. The **Common/Job Default Settings** page opens.
2. You can make changes for the following items as required.

#### File Format

The file format is available from **PDF, TIFF, JPEG, XPS, and High Compression PDF**.

#### Image Quality

This determines the quality of the image when saved, from **1 Low Quality (High Comp.)** to **5 High Quality (Low Comp.)**.

#### PDF/A

Turns PDF/A-compliant format **PDF/A-1a**, **PDF/A-1b**, or **Off**, when File Format above is PDF. PDF/A is an electronic file format for long-term preservation of documents as addressed in the ISO 19005-1 specification.

### OCR Text Recognition

You can convert the scanned document to the text data when you selected **PDF** or **High Compression PDF** as the file format.

### Primary OCR Language

You can choose the primary OCR language from the drop-down list.

### Auto Image Rotation (OCR)

Rotates the image direction to read when setting to **On**.

Note: **OCR Text Recognition**, **Primary OCR Language**, and **Auto Image Rotation (OCR)** can be configured when an optional OCR Expansion kit is installed.

### Color TIFF Compression

This allows to select **TIFF V6** or **TTN2** format for compression of color TIFF images.

### File Separation

This extract pages as separate files from an output file.

3. Click **Submit** button.

## Copy

This section includes advanced settings for copying.

1. Click **Copy** under **Function Settings** on the navigation menu. The **Copy Settings** page opens.
2. You can make changes for the following items as required.

### Reserve Next Priority

Activate or deactivate to prioritize the next job reserved.

### Auto Image Rotation Action

Select the behavior of automatic image rotation in three ways.

### Color Table (Copy)

You can specify the color table name.

Note: Color table (Copy) is displayed only when it is downloaded.

3. Click **Submit** button.

## Function Default

The default settings can be changed in **Common/Job Defaults Settings** page.

## Printer

This section includes advanced settings for printing.

If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

### General

1. Click **Printer** under **Function Settings** on the navigation menu. The **Printer Settings** page opens.
2. You can make changes for the following items as required.

#### Emulation

Set the Emulation Mode.

#### Alternate Emulation

When you have selected **KPDL(Auto)** as emulation mode, you can switch between KPDL and another emulation mode (alternative emulation) automatically according to the data to print. This item can be displayed when an optional Emulation kit is installed.

#### Paper Feed Mode

Determines the behavior of paper feed selection when the paper you requested of size and/or type is not available in the current paper source. **Auto** lets the machine to search for the matching paper including all the paper sources. **Fixed** does not perform searching in the other paper sources.

#### Form Feed Timeout

Adjusts the form feed timeout between 5 and 495 seconds in 5-second increments. A form feed will occur in the absence of data during this time period. The default setting is **30** seconds.

#### Job Name

Select the job number, job name, etc.

#### User Name

Activate or deactivate to use User Name.

#### Message Banner Print

Each time a banner page is printed, the machine halts and displays a message that prompts you to continue banner printing. You can activate (**On**) or deactivate (**Off**) this message.

#### Wide A4

Activate (**On**) or deactivate (**Off**) Wide A4 size for printing.

#### Remote Printing

Permit or prohibit remote printing.

3. Click **Submit** button.

## AirPrint Settings

1. Click **Printer** under **Function Settings** on the navigation menu. The **Printer Settings** page opens.
2. Click **Settings** button. The **AirPrint** Settings page opens.

You can make changes for the following items as required.

### AirPrint

The default setting is **On**.

### Bonjour Name

Enter the Bonjour name.

### Location

Enter the location of the machine on **Location** of the **System Settings** page under **Device Settings**.

Note: When you enter **Location**, the location appears under the printing device name appears on the printer selection screen using the mobile device. The location also appears on the title (upper right) of Command Center RX.

### Geolocation

Specifies whether or not to set the geolocation information of the machine. If this setting turns **On**, **Latitude**, **Longitude** and **Altitude** appear on the **AirPrint** page.

Note: Even if **Geolocation** is set to **Off**, AirPrint works properly.

### Latitude

Enter the latitude of the machine from -90.000000 to 90.000000 degrees.

### Longitude

Enter the longitude of the machine from -180.000000 to 180.000000 degrees.

### Altitude

Enter the altitude of the machine from 0 to 10000 meters.

## Page Control Settings

1. Click **Printer** under **Function Settings** on the navigation menu. The **Printer Settings** page opens.
2. You can make changes for the following items as required.

### Duplex

Select **1-sided**, **2-sided Bind Long Edge**, or **2-sided Bind Short Edge** as duplex mode.

### Copies

Select the number of copies to print.

### Page Orientation

Switches **Portrait** or **Landscape** page orientation.

**LF Action**

Configures LF and CR actions.

**CR Action**

Configures LF and CR actions.

3. Click **Submit** button.

**Print Quality Settings**

1. Click **Printer** under **Function Settings** on the navigation menu. The **Printer Settings** page opens.
2. You can make changes for the following items as required.

**Gloss Mode**

Sets Gloss Mode to **On** or **Off**. The default setting is **Off**. This is only available for some color machines which support Gloss Mode.

**Color Selection**

Sets Color Mode to **Color** or **Black & White**. This is only available for some color machines.

**KIR**

Switches KIR smoothing **On** or **Off**. This is only available for monochrome machines.

**EcoPrint**

Switches EcoPrint **On** or **Off** to control toner consumption for saving the printing costs. The default setting is Off. When selecting **On**, you can select **Toner Save Level** from **1 (Low)** to **5 (High)**.

3. Click **Submit** button.

**E-mail**

This section includes advanced settings for E-mail.

**SMTP protocol**

1. Click **E-mail** under **Function Settings** on the navigation menu. The **E-mail Settings** page opens.
2. You can make changes for the following items as required.

**SMTP Protocol**

Display whether a SMTP connection is available or not. Configure SMTP in **SMTP (E-mail TX)** on the **Protocols Settings** page.

**SMTP Server Name**

Enter the SMTP server name or its IP address. If entering the name, rather than the IP address, a DNS server address must also be configured. The DNS server address may be entered on the **TCP/IP Settings** page.

#### **SMTP Port Number**

Set the SMTP Port Number or use the SMTP default port 25. The default port number for SMTP connections over SSL is 465.

#### **SMTP Server Timeout**

Sets the timeout in seconds during which this device tries to connect to the SMTP server.

#### **Authentication Protocol**

Enables or disables the SMTP authentication protocol or sets **POP before SMTP** as the authentication type. When selecting **On** or **POP before SMTP**, you can select user on the drop-down list.

#### **SMTP Security**

Displays SMTP Security. This item appears when **SSL/TLS** or **STARTTLS** is selected on **SMTP Security** of the **Protocol Settings** page.

#### **POP before SMTP Timeout**

Sets the timeout in seconds during which this device tries to connect to the POP3 server. You can configure this item when you selected **POP before SMTP** as **Authentication Protocol**.

#### **Connection Test**

Tests to confirm that the settings on this page are correct. When **Test** button is clicked, this machine tries to connect to the SMTP server.

#### **Domain Restriction**

Activate or deactivate to restrict domains. Click **Domain List** button to configure. Enter a domain name that is permitted or rejected. You can also specify the E-mail addresses.

3. Click **Submit** button.

### **POP3**

1. Click **E-mail** under **Function Settings** on the navigation menu. The **E-mail Settings** page opens.
2. You can make changes for the following items as required.

#### **POP3 Protocol**

Display whether a POP3 connection is available or not. Set to **On** on **POP3 (E-mail RX)** of the **Protocol Settings** page. If **Remote Printing** is prohibited, E-mail printing is unavailable. Configure **Remote Printing** in **Printer Settings** page.

#### **Check Interval**

Displays the interval, in minutes, for connecting to the POP3 server to check for incoming e-mails at specific interval. Specify the interval of performing checks in the range from 3 minutes to 60 minutes. The default is **15** minutes.

#### Run once now

Click **Receive** button to immediately receive E-mail from the POP3 server. When **Remote Printing** is set to **Permit**, the machine prints the received E-mail.

#### Domain Restriction

Activate or deactivate to restrict domains. Click **Domain List** button to configure. Enter a domain name that is permitted or rejected. You can also specify the E-mail addresses.

#### POP3 User Settings

Click **Settings** button and configure the following user settings. Up to three users can be set.

1. **User Profile 1 (to 3)**: Enables or disables the user.
2. **E-mail Address**: Enter the E-mail address.
3. **POP3 Server Name**: Enter the POP3 server host name or IP address. If you use the host name, you must first specify the DNS server information.
4. **POP3 Port Number**: Enter the POP3 Port Number, or use the POP3 default port number **110**. The default port number for POP3 connections over SSL is **995**.
5. **POP3 Server Timeout**: Enter the timeout in seconds during which this machine tries to connect to the POP3 server.
6. **Login User Name**: Enter the login name of the user for the POP3 account.
7. **Login Password**: Enter the password to log in the POP3 account.
8. **Use APOP**: Enables or disables APOP. APOP is an encryption mechanism used for encrypting the Login Password during communication with the POP3 server. When **Use APOP** is **Off**, the Login Password is sent using plain ASCII text. When **Use APOP** is **On**, the Login Password is encrypted, therefore cannot be read. APOP requires that the POP3 server supports APOP, and has APOP enabled.
9. **POP3 Security**: Enables or disables POP3 Security. When this protocol is enabled, either **SSL/TLS** or **STARTTLS** must be selected. To enable POP3 security, the POP3 port may have to be changed according to the server settings. Typically, 465 for SSL/TLS and 25 or 587 for STARTTLS are well-known SMTP ports.
10. **Connection Test**: This will test one transmission for each press, attempting to establish communication with the POP3 server.
11. **Delete e-mail after retrieval**: Enables or disables the Delete E-mail after retrieval function. When this item is set to **On**, the retrieved E-mail is deleted from the POP3 server. When this item is set to **Off**, the E-mail will not be deleted after retrieved from the POP3 server.
12. **E-mail Size Limit**: Enter maximum E-mail size in kilobytes. When the value is 0, the limitation for E-mail size is disabled.
13. **Cover Page**: Specifies whether to print the body of an E-mail in addition to the attached files. When this item is set to **On**, the attached files and the body of an E-mail are printed. When no attached files exist, only the body of an E-mail is printed. When this item is set to **Off**, only the attached files are printed. When no attached files exist, nothing is printed.

3. Click **Submit** button.

### E-mail Send Settings

1. Click **E-mail** under **Function Settings** on the navigation menu. The **E-mail Settings** page opens.

2. You can make changes for the following items as required.

#### **E-mail Size Limit**

Enter the maximum size of E-mail that can be sent in kilobytes. When the value is 0, the limitation for E-mail size is disabled.

#### **Sender Address**

Displays the sender address used for E-mails sent from this machine.

#### **Signature**

Displays the signature to be inserted in the end of the E-mail body.

#### **Function Default**

The default settings can be changed in **Common/Job Default Settings** page.

3. Click **Submit** button.

## **Scan to Folder**

This section includes advanced settings for copying.

### **FTP Settings**

1. Click **Scan to Folder** under **Function Settings** on the navigation menu. The **Scan to Folder Settings** page opens.
2. This allows you to verify the current settings which follow.

#### **FTP**

Display whether a FTP connection is available or not. Set **FTP Client (Transmission)** to **On** on the **Protocol Settings** page.

#### **FTP Port Number**

Display the FTP port number. Enter **Port Number** on the **Protocol Settings** page.

### **SMB Settings**

1. Click **Scan to Folder** under **Function Settings** on the navigation menu. The **Scan to Folder Settings** page opens.
2. This allows you to verify the current settings which follow.

#### **SMB**

Display whether an SMB connection is available or not. Set **SMB** to **On** on the **Protocol Settings** page.

#### **SMB Port Number**

Display the SMB port number. Enter **Port Number** on the **Protocol Settings** page.

## Function Defaults

1. Click **Scan to Folder** under **Function Settings** on the navigation menu. The **Scan to Folder Settings** page opens.
2. The default settings can be changed in **Common/Job Default Settings** page.

## DSM Scan

DSM (Distributed Scan Management) is a Microsoft definition of scanner management systems over the Windows networks. The administrator can use the Windows Server 2008 R2 scan management to obtain ScanProcess for each user and add them to Active Directory. This will allow the user to execute scanning according to the scan process.

### General

1. Click **DSM Scan** under **Function Settings** on the navigation menu. The **DSM Scan Settings** page opens.
2. You can make changes for the following items as required.

#### DSM Scan

Display whether a DSM connection is available or not. Set **DSM Scan** to **On** on the **Protocol Settings** page.

#### Location

Display the DSM location. Enter the location on **System Settings** page.

#### DSM Scan Client Certificate

Displays whether the certificate is active. To make advanced settings, click **Settings** button and select a certificate. Make settings for the device certificate in **Certificates** page of **Security Settings**.

3. Click **Submit** button.

## LDAP Settings

1. Click **DSM Scan** under **Function Settings** on the navigation menu. The **DSM Scan Settings** page opens.
2. You can make changes for the following items as required.

#### LDAP Server Name

Specifies a name or IP address for the LDAP server. This is required only if Active Directory which contains Scan Process is unidentical with the server for the network authentication.

#### LDAP Port Number

Sets the port number used by LDAP The default port is **389**.

#### Search Timeout

Specifies the timeout time after which a search on the LDAP server expires.

#### LDAP Security (DSM Scan)

Display whether a LDAP security is available or not. Select the LDAP security from **LDAP Security (DSM Scan)** drop-down list on the **Protocol Settings** page.

### Authentication Type

Selects either the **Simple** or **SASL** for the authentication type.

3. Click **Submit** button.

### Certificate Status

1. Click **DSM Scan** under **Function Settings** on the navigation menu. The **DSM Scan Settings** page opens.
2. The status of the **Root Certificates** 1 (to 5) and **DSM Client Certificate** is shown. Make settings for the Root Certificate in **Certificates** page.

## FAX/i-FAX

This section includes advanced settings for FAX/i-FAX.

If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

### Common Settings

1. Click **FAX/i-FAX** under **Function Settings** on the navigation menu. The **FAX/i-FAX Settings** page opens.
2. You can configure settings for **Transmission**. Make the following settings:
  1. **Local FAX Name**: Specifies your FAX system name.
  2. **TTI**: Selects **On** or **Off** whether to send the TTI (Transmit Terminal Identifier) information to the other party.
  3. **TTI Position**: Selects the position of the TTI to be printed on the transmitted documents.
  4. **Account as Local FAX Name**: Set to **On** to use the account name as the local FAX name. The account name appears in place of the local FAX name.
  5. **Retry Times**: Specify the Retry Times from 0 to 14 times.
3. You can configure settings for **Reception**. Make the following settings:
  1. **Media Type**: Sets the media type to print the received documents.
  2. **Use MP Tray**: Selects whether or not to include the MP (multi-purpose) tray for auto media selection when printing received documents. When turned **On**, the MP tray will be included as an option for auto media selection, and when turned **Off**, only the cassettes will be selected.
  3. **Reduced RX Size**: Specifies the printing configuration for printing a document, which is larger than the selected paper size. When **Same Size Override** is selected, the document will be printed on multiple sheets of paper without reducing the text. When **Reduction Override** is selected, the document will be printed on one sheet whenever possible.
  4. **Receive Data/Time**: Selects **On** or **Off** whether to print the reception information such as the received date, the received time, the transmitting party's information and the number of transmitted pages on the top of the received documents.
  5. **Duplex Printing**: Specifies whether or not to use the Duplex mode.
  6. **2 in 1 Printing**: Enables or disables 2 in1 reception.
4. Click **Submit** button.

---

## Fax Settings

1. Click **FAX/i-FAX** under **Function Settings** on the navigation menu. The **FAX/i-FAX Settings** page opens.
2. You can configure settings for **General**. Make the following settings:
  1. **Local FAX Number**: Specifies your FAX system number.
  2. **Local FAX ID**: Specifies your FAX ID.
  3. **Speaker Volume**: Sets the volume of the internal speaker that allows you to listen to the other party or to verify the conditions on the telephone line when the **On-Hook** key was pressed. Select the speaker volume from **0 (Mute)** to **5 (Maximum)**.
  4. **Monitor Volume**: Sets the volume of the internal speaker that allows you to verify the FAX tones during FAX communication. Select the speaker volume from **0 (Mute)** to **5 (Maximum)**.
3. You can configure settings for **Transmission**. Make the following settings:
  1. **Dialing Mode**: According to the type of telephone line you are contracted with, select **Tone (DTMF)**, **Pulse (10PPS)**, or **Pulse (20PPS)**.
  2. **TX Start Speed**: Selects the speed rate at starting transmission from 33600bps, 14400bps, and 9600bps. Once communication is established, the speed rate that is slower than the other is employed.
  3. **ECM TX**: Turns error correction mode on which corrects errors that may happen during communication. To let the ECM feature to take effect, error correction mode must be enabled on both parties in prior.
4. You can configure settings for **Reception**. Make the following settings:
  1. **FAX Receive**: Selects the FAX reception mode. The choices are **Auto (Normal, FAX/Tel, TAD or DRD)** or **Manual**. (The selectable option is different depending on the destination.)
  2. **Number of Rings (Normal)**: Specifies the number of rings when **FAX Receive** is **Auto (Normal)**. The range is **1** to **15**.
  3. **Number of Rings (FAX/Tel)**: Specifies the number of rings when **FAX Receive** is **Auto (FAX/Tel)**. The range is **0** to **15**.
  4. **Number of Rings (TAD)**: Specifies the number of rings when **FAX Receive** is **Auto (TAD)**. The range is **1** to **15**.
  5. **Remote Switching Dial Number**: Specifies the FAX remote switching dial number. The range is **00** to **99**. Remote switching allows you to initiate FAX reception from a telephone connected to the FAX system.
  6. **Encryption Key No.:** Sets the encryption key number used for encrypted communication.
  7. **RX Start Speed**: Selects the speed rate at starting reception from 33600 bps, 14400 bps, and 9600 bps. Once communication is established, the speed rate that is slower than the other is employed.
  8. **ECM RX**: Turns error correction mode on which corrects error that may happen during communication. To let the ECM feature to take effect, error correction mode must be enabled on both parties in prior.
5. You can configure settings for **Encryption Key**. Make the following settings:
  1. **Encryption Key Registration**: Click **Settings** button. The **Encryption Key Registration** page opens. Specifies the encryption key in hexadecimal. The length of the encryption key is 16 digits. Enter the encryption key including the numbers 0-9 and the letters A-F.
  2. Click **Submit** button.
6. You can configure settings for **Remote Settings**. Make the following settings:

1. **FAX Remote Diagnostics:** Activate or deactivate the remote FAX diagnosis.
2. **Remote Diagnostics ID:** Enter the ID (four digits) specified from the customer center when you activate the **FAX Remote Diagnostics**.

**7.** You can configure settings for **TX/RX Restriction**. Make the following settings:

1. **Transmit Restriction:** Selects the transmitting restriction from **Off** and **Permit List + Address Book**.
2. **Receive Restriction:** Selects the reception restriction from **Off**, **Permit List + Address Book**, and **Reject List**.
3. **Unknown Number Reception:** Selects **Reject** or **Permit** when you select **Reject List** from **Receive Restriction**.
4. **Permit No. List:** **Permit No. List** page allows to add the permitted fax numbers and delete the fax numbers specified. Clicking **List** will display **Permit No. List** page. Enter the FAX number to add, then click **Submit** button. To delete a fax number from **Permit No. List**, delete the number from **Permit No. List** page, then click **Submit** button.
5. **Permit ID List:** **Permit ID List** page allows to add the permitted fax IDs and delete the fax IDs specified. Clicking **List** will display **Permit ID List** page. Enter the FAX ID to add, then click **Submit** button. To delete a fax ID from **Permit ID List**, delete the fax ID from **Permit ID List** page, then click **Submit** button.
6. **Reject No. List:** **Reject No. List** page allows to add the prohibited fax numbers and delete the prohibited fax numbers specified. Clicking **List** will display the **Reject No. List** page. Enter the FAX number to add, then click **Submit** button. To delete a fax number from **Reject No. List**, delete the number from **Reject No. List** page, then click **Submit** button.
7. The default settings can be changed in **Common/Job Default Settings** page.

**8.** Click **Submit** button.

### i-FAX Settings

**1.** Click **FAX/i-FAX** under **Function Settings** on the navigation menu. The **FAX/i-FAX Settings** page opens.

**2.** You can configure settings for **TX/RX**. Make the following settings:

1. **i-FAX Protocol:** Display whether an i-FAX connection is available or not. Set **i-FAX (SMTP & POP3)** to **On** on the **Protocol Settings** page.

**3.** Configures **SMTP**. Make the following settings:

1. **SMTP Server Name:** Enter the SMTP server name or its IP address. If entering the name, rather than the IP address, a DNS server address must also be configured. The DNS server address may be entered on the **TCP/IP Settings** page.
2. **SMTP Port Number:** Set the SMTP Port Number or use the SMTP default port 25. The default port number for SMTP connections over SSL is 465.
3. **SMTP Server Timeout:** Sets the timeout in seconds during which this device tries to connect to the SMTP server.
4. **Authentication Protocol:** Enables or disables the SMTP authentication protocol or sets **POP before SMTP** as the authentication type.
5. **POP before SMTP Timeout:** Sets the timeout in seconds during which this device tries to connect to the POP3 server. You can configure this item when you selected **POP before SMTP** as **Authentication Protocol**.
6. **Connection Test:** Tests to confirm that the settings on this page are correct. When **Test** button is clicked, this machine tries to connect to the SMTP server.

7. **Domain Restriction:** Activate or deactivate to restrict domains. Click **Domain List** button to configure. Enter a domain name that is permitted or rejected. You can also specify the E-mail addresses.

4. Configure **POP3 Settings**. Make the following settings:

1. **Check Interval:** Displays the interval, in minutes, for connecting to the POP3 server to check for incoming e-mails at specific interval. Specify the interval of performing checks in the range from 3 minutes to 60 minutes. The default is **15** minutes.
2. **Run once now:** Click **Receive** button to immediately receive E-mail from the POP3 server. When **Remote Printing** is set to **Permit**, the machine prints the received E-mail.
3. **Domain Restriction:** Activate or deactivate to restrict domains. Click **Domain List** button to configure. Enter a domain name that is permitted or rejected. You can also specify the E-mail addresses.
4. **POP3 User Settings:** Click **Settings** button and configure the following user settings.
  - a) **E-mail Address:** Enter the E-mail address.
  - b) **POP3 Server Name:** Enter the POP3 server host name or IP address. If you use the host name, you must first specify the DNS server information.
  - c) **POP3 Port Number:** Enter the POP3 Port Number, or use the POP3 default port number **110**. The default port number for POP3 connections over SSL is **995**.
  - d) **POP3 Server Timeout:** Enter the timeout in seconds during which this machine tries to connect to the POP3 server.
  - e) **Login User Name:** Enter the login name of the user for the POP3 account.
  - f) **Login Password:** Enter the password to log in the POP3 account.
  - g) **Use APOP:** Enables or disables APOP. APOP is an encryption mechanism used for encrypting the Login Password during communication with the POP3 server. When Use APOP is **Off**, the Login Password is sent using plain ASCII text. When Use APOP is **On**, the Login Password is encrypted, therefore cannot be read. APOP requires that the POP3 server supports APOP, and has APOP enabled.
  - h) **Connection Test:** This will test one transmission for each press, attempting to establish communication with the POP3 server.
  - i) **E-mail Size Limit:** Enter maximum E-mail size in kilobytes. When the value is 0, the limitation for E-mail size is disabled.
  - j) **Cover Page:** Specifies whether to print the body of an E-mail in addition to the attached files. When this item is set to **On**, the attached files and the body of an E-mail are printed. When no attached files exist, only the body of an E-mail is printed. When this item is set to **Off**, only the attached files are printed. When no attached files exist, nothing is printed.

5. You can configure settings for **Transmission**. Make the following settings:

1. **Transmission Type:** Allows to choose a method of sending from **Specify for Each Destination, Via Server - On**, and **Via Server - Off (Direct SMTP)**.
2. **Direct SMTP Sender Address:** Enters the sender address who send the E-mail used by Direct SMTP.
3. **Direct SMTP Port Number:** Enter the port number used by Direct SMTP. The default port number is **25**.
4. **Direct SMTP Timeout:** Sets the timeout time in seconds during which this device retries to connect to the SMTP server.

6. You can configure settings for **Reception**. Make the following settings:

1. **Direct SMTP Port Number:** Enter the port number used by Direct SMTP. The default port number is 25.

2. **Direct SMTP Timeout:** Sets the timeout time in seconds during which this device retries to connect to the SMTP server.

7. You can configure settings for **E-mail Send Settings**. This section includes the following items for configuration:

1. **E-mail Size Limit:** Enter the maximum size of E-mail to send in Kilobytes. When the value is 0, the limitation for E-mail size is disabled.
2. **Sender Address:** Displays the sender address used for E-mails sent from this machine. To configure a Sender Address, go to **E-mail Address** on the **POP3 User Settings** page.
3. **Signature:** Displays the signature to insert in the end of the E-mail body. To configure a signature, go to **E-mail Send Settings** on the **E-mail Settings** page.
4. **Function Default:** The default settings can be changed in **Common/Job Default Settings** page.

8. Click **Submit** button.

## Send and Forward

When sending a FAX, FTP, SMB, i-FAX or a E-mail job, Send and Forward automatically forwards the same job to a destination specified.

### General

1. Click **Send and Forward** under **Function Settings** on the navigation menu. The **Send and Forward Settings** page opens.
2. This section includes the following items for configuration.

#### Send and Forward

Switches Send and Forward **On** or **Off**.

#### Rule

Selects any of **E-mail**, **Folder (SMB)**, **Folder (FTP)**, **FAX**, **i-FAX (Via server - On)**, and **i-FAX (Via server - Off)** to apply the Send and Forward.

3. Click **Submit** button.

### Destination

1. Click **Send and Forward** under **Function Settings** on the navigation menu. The **Send and Forward Settings** page opens.
2. This section includes the following items for configuration.

#### Address Book

Click **Address Book** icon and select a type and a name of the address on the address page.

#### E-mail

Email forwards the E-mail to the E-mail address entered. Click **E-mail** icon to specify an E-mail address. The address can be changed using **Addresses**. Click **Submit** button to finalize settings.

#### Folder

Forwards and saves a job in a folder (SMB or FTP). Enter the Host Name, Port Number, path to a folder, Login User Name, and the Login Password. You can confirm that the E-mail is properly forwarded by clicking **Test** button. You can also edit an address by clicking **Addresses**. Click **Submit** button to finalize settings. If you use the host name, you must first specify the DNS server information.

#### Delete

Deletes the address selected.

3. Click **Submit** button.

### Forward Job Settings

1. Click **Send and Forward** under **Function Settings** on the navigation menu. The **Send and Forward Settings** page opens.
2. This section includes the following items for configuration.

#### Color Selection

This selects color mode for scanning and storing. **Auto Color (Color/Grayscale)** and **Auto Color (Color/B & W)** allow you identify color for the original document to scan. You can manually select **Full Color**, **Grayscale**, or **Black & White** to forcedly switch color mode.

#### Scan Resolution

Specifies the resolution for scanning. The resolutions available differ depending on the model, current color mode, and the saving format of files. To scan in full color or grayscale with a solution of 400 dpi or greater, the internal memory must be expanded for some models.

#### File Format

Selects file type to stored the scanned document.

#### Image Quality

Selects the image quality when saving a scanned document **1 Low Quality (High Comp.)** to **5 High Quality (Low Comp.)**.

#### PDF Encryption

Apply encryption to the PDF files to send-and-forward. When turned **On**, this page allows the following settings:

1. **Compatibility**: You can change the PDF version by choosing a compatibility option when you save a job in PDF.
2. **Password to Open Document**: When you set a Document Open password, anyone who tries to open the PDF must type in the password you specify. Set to **On** and enter a Document Open password.
3. **Password to Edit/Print Document**: You can set a password to restrict recipients to print or edit the document, or copy its contents, such as images. Recipients don't need a password to open the document, but they must type the password to accomplish one of these restricted actions to the document, respectively.
4. **Printing Allowed**: Restrict printing of the document.
5. **Change Allowed**: Restrict editing of the document.
6. **Copying of Text/Images/Others**: Allow copying objects including images and text for pasting into other document.

### PDF/A

Turns PDF/A-compliant format **Off**, **PDF/A-1a**, or **PDF/A-1b**, when File Format above is PDF. PDF/A is an electronic file format for long-term preservation of documents as addressed in the ISO 19005-1 specification.

### File Separation

Scans a multi page document and saves each page as a separate file.

### E-mail Subject

The Subject is entered here.

### FTP Encryption TX

This enables or disables encryption for communication. When turned **On**, the encryption algorithm that is selected by **Network Security Settings** page is used.

3. Click **Submit** button.

## RX/Forward Rules

Conditional reception/forwarding is a function for automatically forwarding documents received by FAX or i-FAX to other FAX machines, sending them as attachments to E-mail, or saving them into a FAX Box instead of printing if they satisfy the specified conditions.

For example, you can forward faxes from particular customers received during business hours to the E-mail addresses of the people responsible for those customers, print and save them in a FAX Box if they are received outside business hours, and forward faxes from outside of your business area to the business office nearest to the sender's fax number.

For models that do not support RX/Forward Requirements, the documents received are forwarded in the same requirement.

### Enabling RX/Forward Rules

To use the RX/Forward Rules function, enable this setting.

1. Click **RX/Forward Rules** under **Function Settings** on the navigation menu. The **Settings** page opens.
2. Click **Settings** button. **RX/Forward Rules Settings** page opens.

Select **Off**, **Use Rule for Specific RX**, or **Rule for All RX** from the drop-down list.

When you select **Rule for All RX**, you can configure **Schedule**, **File Name**, **Forward Settings** and **Print Settings** as rules. For details, refer to *Add Rule* shown below.

#### Add Rule

1. Click **Add Rule** button. The **New Rule - Property** page appears.
2. This section includes the following items for configuration.

#### Use Rule

Select **On** when you use the new rule.

## General

Configure the general information on the rule.

1. **Rule Number:** Enter the rule number from 001 to 100.
2. **Rule Name:** Enter the rule name.
3. **Priority:** Select the priority of the rule from the drop-down list.

## Rule Settings

Configure the rule settings.

1. **Rule Type:** Select **FAX Sub Address**, **FAX Number**, **Reception Port** or **i-FAX Address**.
2. **Sub Address:** Displays when you select **FAX Sub Address** as **Rule Type**. Enter the sub address.
3. **FAX Number:** Displays when you select **FAX Number** as **Rule Type**. After selecting rule, enter the fax number.
4. **Reception Port:** Displays when you select **Reception Port** as **Rule Type**. After selecting **Port 1** or **Port 2**, select the rule and enter the fax number.
5. **i-FAX Address:** Displays when you select **i-FAX Address** as **Rule Type**. After selecting rule, enter the i-FAX address.

## Schedule

Configure the schedule for the specified rule.

1. **Schedule:** Select **All Day** or **Preset Time**.
2. **Start Time, End Time:** You can configure the setting when you select **Preset Time** as **Schedule**. Specify the time table from the drop-down list.

## File Name

Configure the file name created when forwarding.

1. **File Name:** Enter the file name.
2. **Additional Information:** Select the additional information on the file name from the drop-down list.

## Forward Settings

Configure the forward destination. Select the destination on the list, and then click the **Delete** icon.

1. **Forwarding:** Select **On** and click the desired address button to specify the forwarding destination.
2. **Address Book:** Click **Address Book** button to open the **Addresses** page. Select the desired Address Book and click **Submit** button.
3. **E-mail:** Click **E-mail** button to open the **E-mail** page. Enter E-mail Address and E-mail Address (Confirmation), and then click **Submit** button.
4. **Folder:** Click **Folder** button to open the **Folder** page.
  - Protocol:** Select **SMB** or **FTP**.
  - Host Name:** Enter the host name. If you use the host name, you must first specify the DNS server information.
  - Port Number:** Enter the port number from 1 to 65535.
  - Path:** Enter the path of the folder.
  - Login User Name:** Enter the login user name.
  - Login Password:** Enter the login password.
  - Connection Test:** Click **Test** button to confirm the connection to the folder.
5. **FAX:** Click **FAX** button to open the **FAX** page.
  - FAX Number:** Enter the fax number.
  - Sub Address:** Enter the sub address.
  - Password:** Enter the password for the sub address.
  - TX Start Speed:** Select **33600 bps**, **14400 bps**, or **9600 bps**.
  - ECM:** Select **On** to use ECM communication.

- Encryption:** Select **Off**, **Key 1** to **Key 20**. You can select **Key 1** to **Key 20** when registering the encryption key in **FAX Settings** page under **Function Settings**.
- Encryption Box:** Select **On** to use the encryption box. You can configure this setting when registering the encryption key.
- Encryption Box No.:** Enter the box number (4 digits). You can configure this setting when registering the encryption key.
- i-FAX:** Click **i-FAX** button to open the i-FAX page.  
**i-FAX Address:** Enter the i-FAX address.  
**Via Server:** Select **On** to send i-FAX via server.  
**Connection Mode:** Select **Simple** or **Full**.  
**Resolution:** Select the resolution from the drop-down list.  
**Compression:** Select **MH**, **MR**, **MNR**, or **JBIG**.  
**Paper Size:** Select **A4/Letter**, **B4**, or **A3/Ledger**.
  - File Format:** Select **PDF**, **TIFF**, or **XPS** as the file format from the drop-down list.
  - PDF Encryption:** Select **On** to use PDF encryption function. Configure the following settings as necessary.  
**Compatibility:** Select **Acrobat 3.0 and later** or **Acrobat 5.0 and later**.  
**Password to Open Document:** Select **On** to set the password to open the document, and then enter the password.  
**Password to Edit/Print Document:** Select **On** to set the password to edit or print the document, and then enter the password. Select **Printing Allowed** or **Changes Allowed** from the drop-down list. Select **Enable** to permit to copying of text or images on **Copying of Text/Images/Others**.
  - PDF/A:** You can configure the setting If PDF Encryption is Disable. Select **Off**, **PDF/A-1a**, or **PDF/A-1b** from the drop-down list.
  - File Separation:** Select **Each Page** or **Off**.
  - E-mail Subject Additional Info.:** Select the additional information from the drop-down list.
  - FTP Encryption TX:** Select **On** to use the FTP encryption transmission function.

### Print Settings

Configure the print settings for received documents with rules.

- Print:** Select **On** to print the received documents with rules.
- Copies:** You can configure this setting when **Print** is set to **On**. Enter the copies of documents to print.

### Storing in FAX Box Settings

Configure the storing settings to the FAX Box.

- Storing in FAX Box:** Select **On** to store the received documents with rules to the FAX Box.
- FAX Box:** You can configure this setting when **Storing in FAX Box** is set to **On**. Click **Box List** button to open the **FAX Boxes** page and select the FAX Box.

- Click **Submit** button.

### Edit Rule

- Click the checkbox on the left of the Rule No. and click **Settings** button. The **Other - Property** page opens.

Click **Check All** button to select all the rules and click **None** button to deselect all the rules.

- Edit the settings of the rule as necessary.
- Click **Submit** button.

### Delete Rule

1. Click the checkbox on the left of the Rule No. and click **Delete** icon.  
Click **Check All** icon to select all the rules and click **None** icon to deselect all the rules.
2. A confirmation message appears. Click **OK**.

### Change Priority of the Rule

1. Click the checkbox on the left of the Rule No. and select the rule.
2. Click **Raise Priority** or **Lower Priority** button.

## Operation Panel

This section explains how to customize the operation panel.

### Customize Status Display

1. Click **Operation Panel** under **Function Settings** on the navigation menu. The **Customize Operation Panel** page opens.
2. This section includes the following items for configuration.

#### Printing Jobs

In **Column 1** and **Column 2**, enter the job name, user name, number of copies, color mode, or the page numbers to print, respectively.

#### Sending Jobs

In **Column 1** and **Column 2**, enter the job name, user name, number of originals or color mode, respectively.

#### Stored jobs

In **Column 1** and **Column 2**, enter the job name, user name, number of originals or color mode, respectively.

3. Click **Submit** button.

### Function Key Settings

1. Click **Operation Panel** under **Function Settings** on the navigation menu. The **Customize Operation Panel** page opens.
2. This section includes the following items for configuration.

#### Copy Function

You can activate or deactivate the **Copy** key on the machine.

#### Sending Function

You can activate or deactivate the **Send** key on the machine.

#### FAX Function

You can activate or deactivate the **Fax** key on the machine.

3. Click **Submit** button.

## Home

1. Click **Operation Panel** under **Function Settings** on the navigation menu. The **Customize Operation Panel** page opens.
2. This section includes the following items for configuration.

### Customize Desktop

Click **Add function**, **Add Program**, then **Add Application** button, and add an item. Up to 8 items can be added per screen, 40 in total. Click **Submit** button to finalize settings. Click **Delete** icon to delete the items that are not needed. **Up** and **Down** button allow to interchange the items in order.

### Customize Taskbar

Specifies the items to show in the task bar. Activate and deactivate each of **Status/Job Cancel**, **Device Information**, **Accessibility Screen**, **Language**, **System Menu**, **Help**, **Program**, and **Message Board**.

### Background

Allows you to change the background image of the Home screen. Select an image from the **Picture 1** to **Picture 8** on the drop-down list.

3. Click **Submit** button.

## Quick Setup Registration

1. Click **Operation Panel** under **Function Settings** on the navigation menu. The **Customize Operation Panel** page opens.
2. This section includes the following items for configuration. By default, each function is assigned with its standard items.

### Copy

Each of **Key 1** to **Key 6** is assigned with one of the copying functions. Select an item from the drop-down list.

### Send

Each of **Key 1** to **Key 6** is assigned with one of the sending functions. Select an item from the drop-down list.

### Fax

Each of **Key 1** to **Key 6** is assigned with one of the fax functions. Select an item from the drop-down list.

### Store Document in Box

Each of **Key 1** to **Key 6** is assigned with one of the Store Document in Box functions. Select an item from the drop-down list.

### Print Document in Box

Each of **Key 1** to **Key 6** is assigned with one of the Print Document in Box functions.

### Send Document in Box

Each of **Key 1** to **Key 6** is assigned with one of the Send Document in Box functions. Select an item from the drop-down list.

3. Click **Submit** button.

## 8 Network Settings

This page is accessible when you have logged in the embedded server with administrator privilege, while network authentication or local authentication is enabled.

If needed, make the following settings: See below for detailed information.

- General
- TCP/IP
- Protocols

### General

This section includes basic settings for networking.

1. Click **General** under **Network Settings** on the navigation menu. The **General** page opens.
2. The current communication status is shown in **Host Name**. Configure the host name on the **System Settings** page of **Device Settings**.
3. Select **Auto**, **10BASE-Half**, **10BASE-Full**, **100BASE-Half**, **100BASE-Full** and **1000BASE-T** from the **LAN Interface** drop-down list depending on your network environment.
4. The current status is shown in **Client Certificate**. To make advanced settings, click **Settings** button. Select the appropriate certificate on the **Certificate Settings** page that will open. When you click **Certificates**, its content is displayed.

Click **Submit** button.

Configure the device certificate on the **Certificates** page.

5. To configure the proxy, set **Proxy** to **On**, and specify the following items as necessary.

#### Proxy Server (HTTP)

Enter the host name or IP address for the proxy server (HTTP). If you use the host name, you must first specify the DNS server information.

#### Port Number

Enter the port number for the proxy server (HTTP).

#### Use the Same Proxy Server for All Protocols

Select **On** when you use the same proxy server for all protocols.

#### Proxy Server (HTTPS)

Enter the host name or IP address for the proxy server (HTTPS). If you use the host name, you must first specify the DNS server information.

#### Port Number

Enter the port number for the proxy server (HTTPS).

### Do Not Use Proxy for Following Domains

Enter the domain address which do not use the proxy. Use a semicolon (;) between multiple addresses.

6. Click **Submit** button.

## TCP/IP

This section includes advanced settings for the TCP/IP protocol.

\* If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. This section includes the following items for configuration.

### TCP/IP

To activate the TCP/IP Settings, select **On**. When **TCP/IP** is **On**, **IPv4 Settings**, **IPv6 Settings**, **IP Filters (IPv4)**, **IP Filters (IPv6)**, **Logical Printers**, and **IPSec Settings** are listed for selection.

### Dynamic DNS

When an IP address that was mapped by the DNS server has been changed, Dynamic DNS automatically remaps the host name to the IP address. To activate the Dynamic DNS Settings, select **On**.

3. Click **Submit** button.

### IPv4 settings

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. This section includes the following items for configuration.

### DHCP/BOOTP

Specifies whether or not to automatically obtain an IP address using DHCP or BOOTP.

### Auto-IP

Turn **On** to automatically assign a unique IP address even though a DHCP server does not exist or DHCP setting is Off in the printing system. The range of the IP address to be assigned is from **169.254.0.0** to **169.254.255.255**, which is reserved for Auto-IP. If an IP address is already assigned by a DHCP server, this does not resolve a new IP address.

### IP Address

If **DHCP/BOOTP** is set to **Off**, then a static IPv4 address can be entered in this field as part of the system network settings. When **DHCP/BOOTP** is set to **On**, a dynamic IPv4 address is assigned to the device, and the field is grayed out. The format of the IPv4 address is a sequence of numbers separated by dots. For example: 192.168.110.171

### Subnet Mask

Specifies the subnet mask. When **DHCP/BOOTP** is turned **On**, a dynamic IPv4 address is assigned to the device, and the field is grayed out.

### Default Gateway

Specifies the IP address of the default gateway. When **DHCP/BOOTP** is turned **On**, a dynamic IPv4 address is assigned to the device, and the field is grayed out.

### Domain Name

Specifies the domain name of the domain to which the printing system belongs. It should not contain the host printer name, for example, "abcde.com". abcde.com. When **DHCP/BOOTP** is turned **On**, a dynamic IPv4 address is assigned to the device, and the field is grayed out.

### DNS Server (Primary, Secondary)

Specifies the IP addresses of the primary and secondary DNS (Domain Name System) servers. When **DHCP/BOOTP** is turned **On** and **Use DNS Server from DHCP** is selected, you can select to use the DNS server obtained via DHCP. When **DHCP/BOOTP** is turned **On** and **Use following DNS Server** is selected, you can enter static DNS server information in the Primary and Secondary fields provided.

### WINS Servers (Primary, Secondary)

Specifies the IP addresses of the primary and secondary WINS (Windows Internet Name Service) servers. When **DHCP/BOOTP** is turned **On** and **Use WINS Server from DHCP** is selected, you can select to use the WINS server obtained via DHCP. When **DHCP/BOOTP** is turned **On** and **Use following WINS Server** is selected, you can enter static WINS server information in the Primary and Secondary fields provided.

## IPv6 Settings

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. This section includes the following items for configuration.

### IPv6

Specifies whether or not to enable the IPv6 protocol. Select **On** to use the IPv6 protocol.

### IP Address

A static IPv6 address can be entered in this field for the device as part of the system network settings. Assigns an IPv6 address to the printing system network component. The format of the IPv6 address is a sequence of numbers (128 bit in total) separated by colons, e.g. 2001:db8:3c4d:15::1a2c:1a1f.

### Prefix Length

Specifies the IPv6 prefix length. It can be a decimal value between **0** and **128**.

### RA(Stateless)

Turn this option **On** to set an IPv6 address using the RA, but without using the DHCP server. This function will require the presence of an RA Stateless router in the network that the device is connected to.

### Default Gateway

Specifies the IPv6 address of the default gateway.

### DHCPv6 (Stateful)

Specifies whether or not to obtain IPv6 IP addresses by automatic configuration. When **RA (Stateless)** is turned **On**, the IP addresses and server information are obtained via DHCPv6 based on the settings of the automatic configuration made under RA (router setting). This function requires the presence of a DHCPv6 router in the network that the device is connected to.

### Domain Name

Specifies the domain name of the domain to which the printing system belongs.

### DNS Server (Primary, Secondary)

Specifies the IP addresses of the primary and secondary DNS (Domain Name System) servers. When **DHCPv6 (Stateful)** is turned **On** and **Use DNS Server from DHCP** is selected, you can select to use the DNS server obtained via DHCP. When **DHCPv6 (Stateful)** is turned **On** and **Use following DNS Server** is selected, you can enter static DNS server information in the Primary and Secondary fields provided.

## Bonjour Settings

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. This section includes the following items for configuration.

### Bonjour

Select **On** or **Off**.

### Bonjour Name

When **Bonjour** is turned **On**, **Bonjour Name** is shown. You can modify the name as necessary.

## IP Filter (IPv4)

This page allows you to configure IP filters. IP filters restrict access to the printing system based on the IP addresses and protocols.

Specify the IP addresses or network addresses of the hosts to which access is granted. If nothing is specified on this page, access from all hosts is allowed.

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. Click **Settings** button. The **IP Filters (IPv4)** page opens. This section includes the following items for configuration.

### IP Address (IPv4)

Specifies the IP address or network address to be permitted.

### Subnet Mask

Specifies the subnet mask to be permitted. When there are no entries, access is allowed to all.

To allow access to a network, enter the network IPv4 address, and the subnet mask. An example of the data format for the .CSV file is: To permit access from all hosts on network 192, enter "192.0.0.0" for the IP address and "255.0.0.0" for the subnet mask. Subnet mask can be left blank.

To allow access to a single IP address, enter the IPv4 address, and "255.255.255.255" for the subnet mask.

### Protocols

Specifies the protocol by which an access is granted. The following protocols can be selected.

- **LPD**
- **FTP**
- **IPP**
- **ThinPrint**
- **HTTP**
- **Raw**
- **SNMP**
- **IPP over SSL**
- **HTTPS**

Note: ThinPrint appears only when an optional ThinPrint is activated.

3. Click **Submit** button.

## IP Filter (IPv6)

This page allows you to configure IP filters. IP filters restrict access to the printing system based on the IP addresses and protocols.

Specify the IP addresses or network addresses of the hosts to which access is granted. If nothing is specified on this page, access from all hosts is allowed.

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. Click **Settings** button. The **IP Filters (IPv6)** page opens. This section includes the following items for configuration.

### IP Address(IPv6)

Specifies the IP addresses to which access is granted. When there are no entries, access is allowed to all. The number of addresses that can be specified depends on the IPv6 network address along with the prefix length setting. IPv6 address filtering: To filter a single IPv6 address: Enter the desired IPv6 address, along with a prefix length of 128.

### Prefix Length

Specifies the IPv6 prefix length. It can be a decimal value between **0** and **128**.

### Protocols

Specifies the protocol by which an access is granted. The following protocols can be selected.

- **LPD**
- **FTP**
- **IPP**
- **ThinPrint**
- **HTTP**
- **Raw**
- **SNMP**
- **IPP over SSL**
- **HTTPS**

Note: ThinPrint appears only when an optional ThinPrint is activated.

3. Click **Submit** button.

### Logical printers

This page allows you to configure the Logical Printers. This machine can be used as a virtual printer for converting ASCII print data to PostScript data or for adding and/or replacing a character strings (commands) at the beginning or end of job data. Up to four logical printers can be set.

Logical Printer is used with one of the following print protocols: FTP, LPR, IPP, IPPS, SMB (NetBEUI) and RAW. If no port is specified for printing, the default port used will be Logical Printer 1 (LP1), port 9100.

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.
2. Click **Settings** button. The **Logical Printers** page opens. This section includes the following items for configuration

#### TCP/IP Port Number

Specifies the port number for the logical printer as well as the TCP raw port number (**9100**, etc.). Conversion is applied to data that is input to the specified raw port in accordance with the selected logical printer. This port is invalid if it is given a port number that is the same as that of an already specified port (For example, FTP or LPD).

#### Bi-directional Printing

Bi-directional Printing can be set to **On** or **Off** when printing to the TCP/IP RAW port. When Bi-directional Printing is **Off**, all Send data is discarded. In order to have the data that is received from the printer returned to the client when printing with PostScript, PjL and other such commands, it is necessary to set Bi-directional Printing is **On**.

#### Start of Job String

Specifies the character string sent to the printer after output, directly to the output port (lp port). This character string is used when it is necessary to transmit a control code before the print data is sent.

#### End of Job String

Specifies the character string sent to the printer after output, directly to the output port (lp port). This character string is used when it is necessary to transmit a control code after the print data is sent.

3. Click **Submit** button.

## IPSec Settings

1. Click **TCP/IP** under **Network Settings** on the navigation menu. The **TCP/IP Settings** page opens.

This section allows you to set access restrictions for IPSec protocol-based communication.

Specifies whether or not to enable the IPSec protocol. Select **On** to use the IPv6 protocol. Select **Off** when encryption is not used.

2. This section includes the following items for configuration.

### Expiration Verification

When this option is enabled, the expiration of the server certificate is verified at communicating. If found expired, communication will fail. When it is disabled, the expiration will not be verified.

### Restriction

Specifies the default policy for non-IPSec packets. Select **Allow** to allow communication with all hosts and networks including those not permitted by the rules. Select **Deny** to allow communication only with the hosts and networks permitted by the rules. **Allowed** means normal traffic (not defined by the IPSec rules) will be allowed to reach the device. **Denied** means only IPSec traffic (as defined by the IPSec rules) will be allowed to reach the device and all other traffic (not defined by the IPSec rules) will be denied to reach the device.

### Root Certificate

Displays whether the certificate is active. **Root Certificate 1 Subject** through **Root Certificate 5 Subject** are displayed. Configure the device certificate on the **Certificates** page.

### IPSec Rules

Allows to validate the rule used for communication using the IPSec protocol. **Rule 1** through **Rule 10** are displayed. To activate this item, click **Settings** button and configure the following on the IPSec Rule Settings page.

1. **Policy**

**Rule:** Select whether the rules for IPSec communication are used or not.

**Key Management Type:** Select a type of the key used for the rule from **IKEv1**, **IKEv2**, and **Manual**.

**Encapsulation Mode:** **Transport** encapsulates an encrypted data and transmits along with an IP header. This is the simplest method when both the transmitting host and receiving host have the IPSec protocol supported. **Tunnel** uses a gateway provided in the network. The gateway receives the IP packets sent by the transmitting host, encrypt the entire IP packet which is then encapsulated by IPSec, then transmits along with a new IP header.

Select whether the rules for IPSec communication are used or not.

2. **IP address**

**IP Version:** Specifies the IP version of the other end. Select **IPv4** or **IPv6**.

**IP Address (IPv4):** Specifies the IPv4 addresses of the hosts or network with which the print system is connecting via IPSec. When you are restricting the scope of IPSec, be sure to specify the IP addresses. If this field is blank, all IPv4 addresses will be allowed to connect the print system.

**Subnet Mask:** When **IPv4** is selected for **IP Version**, this specifies the subnet mask of the hosts or network with which the print system is connecting via IPsec. If this field is blank, the specified addresses are considered to be host addresses.

**IP Address (IPv6):** Specifies the IPv6 addresses of the hosts or network with which the print system is connecting via IPsec. When you are restricting the scope of IPsec, be sure to specify the IP addresses. If this field is blank, all IPv6 addresses will be allowed to connect the print system.

**Prefix Length:** When **IPv6** is selected for **IP Version**, this specifies the prefix length of the hosts or network with which the print system is connecting via IPsec. If this field is blank, the specified addresses are considered to be host addresses.

**Remote Peer Address:** If **Tunnel** is selected in **Encapsulation Mode**, assign an IP address that is remotely controlled.

3. **Authentication:** Configures the local side authentication when **IKEv1** is selected as **Key Management Type**. To set a character string as the shared key and use it for communication, select **Pre-shared Key** and enter the string of the pre-shared key in the text box. To use the CA-issued Device Certification or Root Certificate, select the **Certificates**. When **Certificates** is selected, the availability of the device certificate is shown. To make advanced settings, click **Settings** button and select a certificate. Configure the device certificate on the **Certificates** page of **Security Settings**.

Configures the local side and remote side authentication when **IKEv2** is selected as **Key Management Type**. Configure **Authentication Type**, **Local ID Type**, **Local ID** and **Pre-shared Key** on **Local Side**, and **Authentication Type**, **Remote ID Type**, **Remote ID** and **Pre-shared Key** on **Remote Side**.

4. **Key Exchange (IKE phase1):** When using IKE phase1, a secure connection with the other end is established by generating ISAKMP SAs. Configure the following items so that they meet the requirement of the other end.

**Mode:** Configures this item when **IKEv1** is selected as **Key Management Type**.

**Main Mode** protects identifications but requires more messages to be exchanged with the other end. **Aggressive Mode** requires fewer messages to be exchanged with the other end than **Main Mode** but restricts identification protection and narrows the extent of the parameter negotiations. When **Aggressive Mode** is selected and **Pre-shared Key** is selected for **Authentication Type**, only host addresses can be specified for IP addresses of the rule.

**Hash:** Selects the hash algorithm.

**Encryption:** Selects the encryption algorithm.

**Diffie-Hellman Group:** The Diffie-Hellman key-sharing algorithm allows two hosts on an unsecured network to share a private key securely. Select the Diffie-Hellman group to use for key sharing.

**Lifetime (Time):** Specifies the lifetime of an ISAKMP SA in seconds.

5. **Data Protection (IKE phase2)**

In IKE phase2, IPsec SAs such as ESP or AH are established by using SAs established in IKE phase1. Configure the following items so that they meet the requirement of the other end.

**Protocol:** Select **ESP** or **AH** for the protocol. ESP protects the privacy and integrity of the packet contents. Select the hash algorithm and encryption algorithm below.

**AH** protects the integrity of the packet contents using encryption checksum. When you select **AH** as Protocols, you cannot use the AES-GCM-128, 192, or 256. Select the hash algorithm below.

**Hash:** Selects the hash algorithm. When you select AES-GCM-128, 192, or 256 on Encryption, you have to select the AES-GCM-128, 192, or 256 or the AES-GMAC-128, 192, or 256 corresponding to the same bit.

**Encryption:** Selects the encryption algorithm. (When **ESP** is selected under **Protocol**.) When you select the AES-GCM-128, 192, or 256 on Hash, you have to select the AES-GCM-128, 192, or 256 corresponding to the same bit. When you select the AES-GMAC-128, 192, or 256 on Hash, you have to select the AES-GCM-128, 192, or 256 corresponding to the same bit. If you do not select any algorithm, the machine authenticates without encryption.

**PFS:** When **PFS** is turned **On** (enabled), even if a key is decrypted, the decrypted key cannot be used to decrypt the other keys generated after the decryption. This improves the safety, but imposes a heavy burden because of more key-generation processes.

**Diffie-Hellman Group:** When **PFS** is turned **On** (enabled), select the Diffie-Hellman Group to use.

**Lifetime Measurement:** Select **Time** or **Time & Data Size**.

**Lifetime (Time):** Configure the lifetime of IPsec SA in seconds.

**Lifetime (Data Size):** Configure this item when **Time & Data Size** is selected as **Lifetime Measurement**. Configure the lifetime (data size) of IPsec SA in kilobytes.

**Extended Sequence Number:** Determines whether a sequence number is 64-bit extended by IPsec. To execute, select **On**.

6. **Manual:** If **Key Management Type** is set to **Manual**, configure:

**Protocol, Hash, Encryption, SPI Format, SPI for Inbound, SPI for Outbound, Key Format, Authentication Key for Inbound, Authentication Key for Outbound, Encryption Key for Inbound, Encryption Key for Outbound.**

Click **Submit** button to finalize settings.

3. Click **Submit** button.

## Protocol

This section includes advanced settings for various protocols used as the communication procedures and communication protocols.

\*: If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

1. Click **Protocol** under **Network Settings** on the navigation menu. The **Protocol Settings** page opens.
2. This section includes the following items for configuration.

### Print Protocols

Configure the protocols used for printing. This section includes the following items for configuration:

1. **NetBEUI:** The NetBEUI protocol allows Peer-to-peer printing (SMB Print). With this protocol enabled, the printing system is created in Windows Network Neighborhood. NetBEUI is an enhanced version of the NetBIOS protocol, which is used for transport of SMB protocol.  
Enables or disables the NetBEUI protocol. If NetBEUI is turned **On**, the name resolution by NetBIOS (NMB) becomes available.  
**Workgroup:** Workgroup represents the workgroup which will appear in **Entire Network** in "Windows Network Neighborhood."  
**Comment:** You can enter comments here. (This can be left blank.)
2. **LPD:** The LPD protocol is a printing system designed for printing text or PostScript files. To enable the LDAP protocol, turn this item **On**.
3. **FTP Server (Reception):** FTP is a communications protocol for transmitting files over a Network. To enable the FTP protocol, turn this item **On**.
4. **IPP:** IPP is a protocol which performs transmission and reception of printing data and configuration of printing systems through TCP/IP networks including the Internet. To enable the IPP protocol, turn this item **On**. Enter **Port Number** between **1** to **32767**. Typically, this should be **631**. (e.g. http://(IP address):631/printers/lp1)
5. **IPP over SSL:** A certificate can be added for communication using the IPP protocol. To enable the IPP protocol, turn this item **On**. To enable this protocol,

select **On** on **SSL** of the **Network Security Settings** page. Enter **Port Number** between **1** to **32767**. Typically, this should be **443**. The status of **IPP over SSL Certificate** is shown. To make advanced settings, click **Settings** button and select a certificate. Click **Submit** button to finalize settings.

Configure the device certificate on the **Certificates** page of **Security Settings**. This Certificate can be used in common with IPP over SSL and HTTPS.

6. **Raw**: RAW employs another method of printing over the network like LPR. Typically, RAW uses port 9100 to remotely administer the printer via using SNMP or MIB. To enable the RAW protocol, turn this item **On**.
7. **ThinPrint**: Configure this setting whether to use the ThinPrint. Turn this item **On** and enter **Port Number** from **1** to **32767**. Typically, this should be **4000**. To use **ThinPrint over SSL**, select **On** on **SSL** of the **Network Security Settings** page. Click **Settings** button to select the Device Certificate. Click **Submit** button to determine the setting.
8. **WSD Print**: WSD is a new networking protocol provided with Windows Vista for discovery of the printing systems and data exchange for printing. To enable the WSD protocol, turn this item **On**.
9. **POP3 (E-mail RX)**: POP3 is a standard protocol for retrieval of E-mail. POP3 is a standard protocol used by local e-mail clients including the printing system to retrieve E-mail from a remote server over a TCP/IP connection. To enable the POP3 protocol to retrieve E-mail, turn this item **On**. To configure the POP3 protocol, go to the **E-mail Settings** page under **Function Settings**. To use E-mail printing, activate remote printing on the **Printer Settings** page under **Function Settings**.  
Select a method for **POP3 Security (User 1 (to 3))** from **STARTTLS**, or **SSL/TLS**, or **Off** on the drop-down list. To enable this protocol, activate SSL on the **Network Security Settings** page under **Security Settings**.

### Send Protocols

Configure the protocols used for sending E-mail. This section includes the following items for configuration:

1. **SMTP (E-mail TX)**: SMTP is an Internet standard for E-mail transmission across Internet Protocol (IP) networks. To enable E-mail transmission using SMTP, turn this item **On**. To configure the POP3 protocol, go to the **E-mail Settings** page under **Function Settings**.  
Select a method for **SMTP Security (User #)** from **Off**, **STARTTLS**, and **SSL/TLS** on the drop-down list. To enable this protocol, activate SSL on the **Network Security Settings** page under **Security Settings**.
2. **FTP Client (Transmission)**: FTP (File Transfer Protocol) is a standard network protocol used to transfer files from one host or to another host over a TCP-based network, such as the Internet. To enable the FTP protocol, turn this item **On**. Enter Port Number between **1** to **65535**. Typically, this should be **21**. By selecting **On** on **FTP Encryption TX**, the file transmission is implemented with the algorithms configured in the following. To enable this protocol, activate SSL on the **Network Security Settings** page under **Security Settings**.
3. **SMB**: SMB is a network protocol applied to shared access to files, printers, serial ports, etc.. To enable the SMB protocol, turn this item **On**. Enter **Port Number** between **1** to **65535**. Typically, this should be **445**.
4. **i-FAX (SMTP and POP3)**: To enable i-FAX, turn this item **On**. To configure i-FAX, go to the **FAX/i-FAX Settings** page under **Function Settings**.
5. **WSD Scan**: WSD is a new networking protocol provided with Windows Vista for discovery of the printing systems and data exchange for printing. To enable the WSD protocol, turn this item **On**.
6. **DSM Scan**: DSM allows the distributed scan management. The system administrator can use DSM to manage scan services over organizations which have a large number of users. To enable DSM scan, turn this item **On**. To configure DSM scan, go to the **DSM Scan Settings** page under **Function**

**Settings.** To enable this item, select **Network Authentication** on the **Authentication Settings** page under **Management Settings**. Select a method for **LDAP Security (DSM Scan)** from **Off**, **STARTTLS**, or **SSL/TLS** on the drop-down list. To enable this item, activate SSL on the **Network Security Settings** page under **Security Settings**.

### Other Protocols

This section allows to configure other network protocols. This section includes the following items for configuration:

1. **SNMPv1/v2c:** The SNMP protocol provides and transfers management information within the network environment. Should an error occur such as Add Paper, the printing system automatically generates a trap, an error message sent to up to two predetermined trap recipients. To enable the SNMPv1/v2 protocol, turn this item **On**. To configure the SNMPv1/v2 protocol, go to the **SNMP Settings** page under **Management Settings**.
2. **SNMPv3:** The SNMP protocol provides and transfers management information within the network environment. To enable the SNMPv3 protocol, turn this item **On**. To configure the SNMPv3 protocol, go to the **SNMP Settings** page under **Management Settings**.
3. **HTTP:** HTTP is the protocol to exchange or transfer hypertext between the World Wide Web and web browsers. To enable the HTTP protocol, turn this item **On**.
4. **HTTPS:** HTTPS (Hypertext Transfer Protocol Secure) is a widely-used communications protocol for secure communication over the Internet. It provides bidirectional encryption of communications between a client web browser and a web server. To enable the HTTPS protocol, turn this item **On**. To enable this item, activate SSL on the **Network Security Settings** page under **Security Settings**. The current status of the certificate is shown in **HTTPS Certificate**. To make advanced settings, click **Settings** button and select a device certificate. Click **Submit** button to finalize settings.

Configure the device certificate on the **Certificates** page under **Security Settings**. This Certificate can be used in common with IPP over SSL and HTTPS.

5. **Enhanced WSD:** Enhanced WSD is an API to simplify connections to web service enabled devices, such as Printers, Scanners and File Shares. To enable Enhanced WSD, turn this item **On**.
6. **Enhanced WSD over SSL:** Enhanced WSD (SSL) is a communication security protocol that provides encryption, authentication, and anti-tampering integrity over the Internet. To enable Enhanced WSD (SSL), turn this item **On**. To enable this item, activate SSL on the **Network Security Settings** page under **Security Settings**. The status of the certificate is shown in **Enhanced WSD over SSL Certificate**. To make advanced settings, click **Settings** button and select a device certificate. Click **Submit** button to finalize settings.

Configure the device certificate on the **Certificates** page under **Security Settings**.

7. **LDAP:** The printing system can refer to the address book which is on the LDAP server as an external address book and assign a FAX number and E-mail address to the destination. To enable the LDAP protocol, turn this item **On**. To configure the External Address Book, go to the **External Address Book Settings** page under **Address Book**. To configure advanced settings, go to **Authentication Settings** page under **Management Settings**. Select a method for **LDAP Security** from **STARTTLS**, **SSL/TLS**, and **Off** on either the **External Address Book #** or **Network Authentication** drop-down list. To enable this item, activate SSL on the **Network Security Settings** page under **Security Settings**.
8. **IEEE802.1x:** IEEE802.1x is a security protocol that allows login to the secured networks based on a client certificate. To enable the IEEE802.1x protocol, turn this item **On**.

To make advanced settings, click **Settings** button. The status of this protocol is shown in **IEEE802.1x Settings** page. This section includes the following items for configuration:

#### **IEEE802.1x**

**Effective Encryption:** Select a method of encryption from **EAP-TLS**, **EAP-TTLS**, **EAP-FAST** and **PEAP(AP-MS-CHAPv2)** on the drop-down list.

**Tunneled Authentication Protocol:** This protocol is activated when **EAP-TTLS** has been selected for encryption. Select a method of authentication from **MSCHAPV2**, **MSCHAP**, **CHAP**, and **PAP** on the drop-down list.

**Login User Name:** Enter the name of the user to access the printing system. The IEEE802.1x client certificate of this user must be valid.

**Password:** This protocol is activated when **EAP-TTLS**, **EAP-FAST**, or **PEAP(AP-MS-CHAPv2)** has been selected for encryption. Enter the password.

**Common Name:** This protocol is activated when **EAP-TTLS**, **EAP-FAST**, or **PEAP(AP-MS-CHAPv2)** has been selected for encryption. Specifies the common name of the server certificate if the server is required to be authenticated.

**Match Rule of Common Name:** This protocol is activated when **EAP-TTLS**, **EAP-FAST**, or **PEAP(AP-MS-CHAPv2)** has been selected for encryption. When the server certificate is verified, the common name specified under **Common Name** is compared with the common name on the server certificate. This item allows you to specify whether the common names are considered to be matched if they exactly or partially match.

**Expiration Verification:** When this option is enabled, the expiration of the server certificate is verified at communicating. If the certificate is expired, communication will fail. When it is disabled, the expiration will not be verified.

**IEEE802.1x Client Certificate:** The current status is shown in **IEEE802.1x Client Certificate**. To make advanced settings, click **Settings** button and select a device certificate. Click **Submit** button to finalize settings. Configure the device certificate on the **Certificates** page under **Security Settings**.

#### **Certificate Status**

**Root Certificate 1 (to 5), IEEE802.1x Client Certificate:** The content of the certificate is shown. Make settings for the Root Certificate on the **Certificates** page under **Security Settings**.

3. Click **Submit** button.

## 9 Security Settings

This page is accessible when you have logged in the embedded server with administrator privilege, while network authentication or local authentication is enabled.

If needed, make the following settings: See below for detailed information.

- Device Security
- Send Security
- Network Security
- Certificates

### Device Security

This section includes settings for device security.

#### Interface Block

This page allows you to restrict access from each interface.

1. Click **Device Security** under **Security Settings** on the navigation menu. The **Device Security Settings** page opens.
2. This section includes the following items for configuration.

#### Network

Access from the network interface cannot be restricted. Access should be restricted depending on the protocol. For more details, see the **Protocol Settings** page under **Network Settings**.

#### USB Device

To block accesses from the devices connected to the USB port, select **Block**.

#### USB Host

To block accesses from the USB host devices, select **Block**.

#### USB Storage

To block accesses from the storages connected to the USB port, select **Block**.

#### Option Interface 1

To block accesses from the Option 1 interface, select **Block**.

#### Option Interface 2

To block accesses from the Option 2 interface, select **Block**.

3. Click **Submit** button.

## Lock Operation Panel

Restricts access from the operation panel.

1. Click **Device Security** under **Security Settings** on the navigation menu. The **Device Security Settings** page opens.
2. Select the drop-down list, click **On** or **Lock**, **Partial lock 1**, **Partial lock 2**, **Partial lock 3** or **Partial Lock**, **Off** or **Unlock** in the operation remain.

**Note:** Each model depends on the display.

This section includes the following items for configuration.

### On or Lock

Settings related to execution of input and output, jobs and paper are prohibited. To limit partial-use the following **Partial lock 1 (-3)**.

#### Partial lock 1

Settings related to input/output, such as network settings, system settings, document settings are prohibited. (e.g. the registration/edit of Address book and Document box)

#### Partial lock 2

Settings related to the run job panel settings, printer settings, in addition to **Partial lock 1** limit will be banned. (e.g. stop key use the job cancel)

#### Partial lock 3 or Partial Lock

Settings related to paper, in addition to the limit of **Partial lock 2** is prohibited. (e.g. Cassette Settings, MP Tray Settings)

### Off or Unlock

All keys are permitted to use.

3. Click **Submit** button.

## Display Status /Log

Job status, job histories, and FAX communication histories are restricted.

1. Click **Device Security** under **Security Settings** on the navigation menu. The **Device Security Settings** page opens.
2. This section includes the following items for configuration.

### Display Jobs Detail Status

This enables to restrict the progress of job processing in detail. You can select **Hide All** to allow only the administrators who logged in using administrator privilege to see the jobs status. **Show All** allows all administrators and users to see the jobs status. Selecting **My Jobs Only** only allows the user to see the jobs log of his/her own.

### Display Jobs Log

This enables to restrict the progress of job processing in detail. You can select **Hide All** to allow only the administrators who logged in using administrator privilege to see the jobs log. **Show All** allows all administrators and users to see the jobs log. Selecting **My Jobs Only** only allows the user to see the jobs log of his/her own.

#### Display FAX Log

This enables to restrict the history of fax communications. You can select **Hide All** to allow only the administrators who logged in using administrator privilege to see the history of fax communications. **Show All** allows all administrators and users to see the logs of fax communications.

3. Click **Submit** button.

### Authentication Security Settings

This section allows to configure the passwords and user accounts for security. These settings can be made when the local authentication is enabled.

1. Click **Device Security** under **Security Settings** on the navigation menu. The **Device Security Settings** page opens.
2. This section includes the following items for configuration.

#### Password Policy Settings

Sets the password policy.

1. **Password Policy**: To set the password policy, set this to **On** and configure the following.
2. **Maximum password age**: Turn to **On** and select the valid period in the number of days from the drop-down list. **1 – 180** days
3. **Maximum password length**: Turn to **On** and select the length in the number of characters from the drop-down list. **1 – 64** characters.
4. **Password complexity**: Select the password complexity from **No more than two consecutive identical char**, **At least one uppercase letter (A-Z)**, **At least one lowercase letter (a-z)**, **At least one number (0-9)**, or **At least one symbol**.
5. **Password Policy Violated User List**: Clicking the **User List** button will display a list of users that are in violation of the password policy.

#### User Account Lockout Settings

You can assign a specific user account that you want to exclude.

1. **Lockout Policy**: To set the password policy, set this to **On** and configure the following.
2. **Number of Retries until Locked**: Select the number of password retries until the account is locked, from the drop-down list (**1 – 10** times).
3. **Lockout Duration**: Select the time period in minutes until the account is excluded, from the drop-down list (**1 – 60** minutes).
4. **Lockout Target**: Select the users that you want to exclude, either **All** or **Remote Login Only**.
5. **Locked out Users List**: Clicking the **User List** button will display a list of users that are excluded.

3. Click **Submit** button.

### Unusable Time Setting

This determines the time period during which the machine is restricted for use.

1. Click **Device Security** under **Security Settings** on the navigation menu. The **Device Security Settings** page opens.
2. This section includes the following items for configuration.

#### Unusable Time

Set On to use it. When this is **On**, the machine is unusable during the time period from **Start Time** to **End Time**. To use the machine during this period, an unlock code must be entered.

#### Start Time

Select the time of beginning of unusable time, from the drop-down list.

#### End Time

Select the time of ending of unusable time, from the drop-down list.

#### Unlock Code

Define an unlock code that you can use to temporarily deactivate the unusable time. Enter a digit from **0000** to **9999**.

#### Data Security Settings

This setting appears when an optional Data Security kit is activated. Click **Settings** button to open the Password page. Enter the password and click **OK** button to enable the data security function.

#### Document Guard Settings

This setting appears when an optional Printed Document Guard Kit(B) is activated. Select **On** to use the Document Guard.

3. Click **Submit** button.

### Send Security

This section includes settings for security for Sending.

1. Click **Send Security** under **Security Settings** on the navigation menu. The **Send Security Settings** page opens.
2. This section includes the following items for configuration.

#### Dest. Check before Send

This enables the front panel message which prompts you to confirm the destination to forward the scan data. To enable, select **On**. The message is displayed when the machine's Start key is pressed to start scanning.

#### Entry Check for New Dest.

When enabled, this determines whether re-entry of a password for confirmation is required when adding a new destination. To enable, select **On**.

#### New Destination Entry

Determines whether an entry of a new destination is allowed. **Permit** activates the entry of a new destination. **Prohibit** deactivates the entry of a new destination.

### New Destination Entry (FAX)

This entry becomes active when New Destination Entry has been set to **Permit**. **Permit** activates the entry of a new fax destination. **Prohibit** deactivates the entry of a new fax destination.

### Recall Destination

Enables or disables recalling the destination. **Permit** activates the entry of a destination to recall. **Prohibit** deactivates the entry of a destination to recall.

3. Click **Submit** button.

## Network Security

This section includes settings for network security.

\*: If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

### Network Security Settings

1. Click **Network Security** under **Security Settings** on the navigation menu. The **Network Security Settings** page opens.
2. This section includes the following items for configuration.

#### SSL

SSL is a cryptographic protocol that provides communication security between a PC and the machine. To enable, select **On**. **Off** deactivates the SSL protocol for communication.

#### Serverside Settings

Configures security settings on the server side. This section includes the following items for configuration:

1. **TLS Version**: TLS, as well as SSL, is a cryptographic protocol that provides communication security between a PC and the machine. Select the version of TLS that you want to use from **SSL3.0/TLS1.0**, **TLS1.1**, and **TLS1.2**. You can use more than one algorithm at a time.
2. **Effective Encryption**: Select an algorithm that you want to use from **ARCFOUR**, **DES**, **3DES**, **AES** and **AES-GCM**. You can use more than one algorithm at a time.
3. **Hash**: Select a Hash algorithm of either **SHA1** or **SHA2(256/384)**. You can use more than one algorithm at a time.
4. **HTTP Security**: Specifies the security level for HTTP.  
**Secure Only (HTTPS)**: Encrypts all HTTP protocol communications. Only the URLs that begin with `https://` are accessible. If a URL beginning with `http://` is specified, it will be automatically redirected to `https://`.  
**Not Secure (HTTPS & HTTP)**: Enables access for both encrypted and unencrypted HTTP protocol communication. URLs beginning with either `https://` or `http://` are accessible. The former URL establishes encrypted communication and the latter establishes unencrypted communication.
5. **IPP Security**: Specifies the security level for IPP.  
**Secure Only (IPPS)**: Encrypts all HTTP protocol communications.  
**Not Secure (IPPS & IPP)**: Enables access for both encrypted and unencrypted IPP protocol communications.

#### Clientside Settings

Configures security settings on the client (PC) side. This section includes the following items for configuration:

1. **TLS Version:** TLS, as well as SSL, is a cryptographic protocol that provides communication security between a PC and the machine. Select the version of TLS that you want to use from **SSL3.0/TLS1.0**, **TLS1.1**, and **TLS1.2**. You can use more than one algorithm at a time.
2. **Effective Encryption:** Select an algorithm that you want to use from **ARCFOUR**, **DES**, **3DES**, **AES** and **AES-GCM**. You can use more than one algorithm at a time.
3. **Hash:** Select a Hash algorithm of either **SHA1** or **SHA2(256/384)**. You can use more than one algorithm at a time.  
When more than one algorithm are selected, the machine selects one algorithm to automatically connect to the server.
4. **Certificate Verification:** When set to **On**, this verifies the expiration of the server certificate during communication. If the certificate is expired, communication will fail. When set **Off**, the expiration will not be verified.

Note: When the **SSL** is set to **On** and **HTTP Security** is set to **Secure Only (HTTPS)**, the document boxes cannot be accessed by the TWAIN driver.

3. Click **Submit** button.

## Network Access Settings

1. Click **Network Security** under **Security Settings** on the navigation menu. The **Network Security Settings** page opens.
2. This section includes the following items for configuration.

### Filtering/ Firewall

Filtering and firewall settings can restrict the network access to the device so that only the specific network addresses are allowed. For details, see the **IP Filter(IPv4) Settings** and **IP Filter(IPv6) Settings** pages of the **TCP/IP Settings** page under **Network Settings**.

### SNMPv1/v2c

The SNMP Read and Write Community settings function as passwords to control read and write access to the device via SNMP. For more information, see the **SNMP Settings** page under **Management Settings**.

### SNMPv3

The SNMPv3 communication settings are used to control the authentication and encryption communication that occur via SNMP. For more information, see the **SNMP Settings** page under **Management Settings**.

### SSL

To enable SSL, settings for Secure Protocols must be made. For more information, see **SSL** of the **Network Security Settings** page.

### IEEE802.1x

To enable IEEE802.1x, you must first make the IEEE802.1x settings. For more information, see the **IEEE802.1x Settings** page of the **Protocol Settings** page under **Network Settings**.

### IPSec

To enable IPSec, you must first make the IPSec settings. For more information, see the **TCP/IP Settings** page under **Network Settings**.

3. Click **Submit** button.

## Certificates

This page allows you to create, update, or check details on a certificate. After you have changed this setting, you must restart the network or this machine.

\*: If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

### Device Certificate

1. Click **Certificates** under **Security Settings** on the navigation menu. The **Certificates** page opens.
2. A list of the device certificates will be shown, allowing you to check the following: **Device Certificate 1** is automatically issued by default. The automatically issued certificate has the country code, common name, and a validity period of about 10 years already configured.

#### Status

Displays whether the certificate is active.

#### Subject

Displays the country code and common name.

#### Expiration

Displays the validity period of the certificate.

#### Protocol

Displays the protocols available (HTTPS, IPP over SSL, Enhanced WSD (SSL), IEEE802.1X, ThinPrint, DSM Scan, IPsecRuleX, and other protocols).

3. This section includes the following items for configuration.

#### Device Certificate 1 (to 5)

This sections allows you to modify the initial settings, add a new one, and delete the existing settings.

Click **Settings** button of **Device Certificate 1 (to 5)**. The **Device Certificate 1 (to 5)** page opens to show the current status. This page allows the following settings:

**Status:** Displays whether the certificate is active.

**Expiration:** Displays the validity period of the certificate.

**View Certificate:** Click **View** button to view the details of the certificate.

**Create Self Certificate:** Click **Create** button to open the **Certificate Settings** page. Enter or select the information for settings. **Country Code**, **State/Province**, **Locality Name**, **Organization Name**, **Organization Unit Name**, **Common Name**, **E-mail Address**, **Current Universal Time (UTC/GMT)**, **Validity Period**, and **Key Length** are displayed automatically. **Key Length** is the information needed to generate encryption, in length of either 1024 or 2048 bits. Click **Submit** button to finalize settings.

**Edit Certificate:** Click **Edit** button to open the **Expiration Settings** page. Enter the validity period. **Current Universal Time (UTC/GMT)** is displayed automatically.

Click **Submit** button to finalize settings.

**Delete Certificate:** When you click **Delete** button, the certificate is displayed. Delete the content.

**Export Certificate:** When you click **Export** button, the dialog screen is displayed. Save the certificate.

### **Root Certificate 1 (to 5)**

Allows you to create, configure, register, or delete the certificate.

1. Click **Settings** button of **Root Certificate 1 (to 5)**. The **Root Certificate 1 (to 5) Settings** page opens to show the current status. This page allows the following settings:
  - Status:** Displays whether the certificate is active.
  - Expiration:** Displays the validity period of the certificate.
  - Import Certificate:** Click **Import** button to open the **File Import** page. Click **Browse** button and select a file to import in **Import Root Certificate 1 (to 5)** file. Click **Submit** button to finalize settings.
2. To delete a device certificate of **Device Certificate 2 (to 5)**, highlight the certificate and click **Delete** button.

Note: A certificate can be assigned to a protocol or a configuration.  
To configure the IPsec Rule Certificate, go to **TCP/IP Settings** page.  
To configure other Certificates, go to **Protocols Settings** page under **Network Settings**.

# 10 Management Settings

This page is accessible when you have logged in the embedded server with administrator privilege, while network authentication or local authentication is enabled.

If needed, make the following settings: See below for detailed information.

- Job Accounting
- Authentication
- ID Card
- Notification/Report
- History Settings
- SNMP
- System Stamp
- Message Board
- Reset

## Job Accounting

This section includes advanced settings for Job Accounting.

### Settings

To enable Job Accounting, you must first make the Job Accounting settings.

1. Click **Job Accounting** under **Management Settings** on the navigation menu. The **Settings** page opens.
2. Click **Settings** button. The **Job Accounting Settings** page opens. This section includes the following items for configuration.

#### Job Accounting

Turn to **On** to activate Job Accounting.

#### Job Accounting Access

To execute Job Accounting using network authentication, select **Network**.

#### Action Settings

This section includes the following items for configuration:

1. **Apply Limit**: Select the behavior of processing a job when the maximum print pages have been reached, from **Immediately**, **Subsequently**, and **Alert Only**.
  2. **Copier/Printer Count**: You can select how the copying and printing page counts are shown – either the total of both or each of copying and printing individually.
  3. **Unknown ID Job**: Select the behavior of processing a job that has an unknown account ID or has no account ID, from **Permit** and **Reject**.
3. If you have set **Job Accounting** to **On** in step 2 above, **Default Counter Limit** and **Count by Paper Size** are displayed.
  4. You can configure settings for **Default Counter Limit**. Enter the initial value for the counter limit, from **1** to **9999999**.

5. Configures **Count by Paper Size**. If needed, make the following settings for **Paper 1 to 5**:
  1. **Paper 1 (to 5)**: To aggregate printed pages depending on the size, select **On**.
  2. **Page Size**: Select a paper size to aggregate the printed pages, from the drop-down list.
  3. **Media Type**: Select a media type to aggregate the printed pages, from the drop-down list.
6. Click **Submit** button.

## Local Job Accounting List

This section includes settings for adding and deleting an account and for departmental accounting.

### Add Account

To aggregate pages by a department or all departments, accounts must be added.

1. Click **Add Account** icon. The **New Account - Property** page opens.
2. You can configure settings for **Account Property**. This section includes the following items for configuration:

#### Account Name

Enter the account name.

#### Account ID

Enter the Account ID.

3. You can configure settings for **Restriction**.
  1. Select how the functionalities are restricted for use, from **Off**, **Counter Limit**, and **Reject Usage**.
  2. Enter the initial value for restricting functionalities, from **1** to **9999999**.
4. Click **Submit** button.

### Delete

1. Click the checkbox to the left of the **Account ID**. To select all items at once, click **Check All**.
2. Click **Delete** icon once.

### Counter

1. Click the checkbox to the left of **Account ID**.
2. Click **Counter** icon once. The total number of copies accounted for the account is displayed.
3. You can view the results of accounting.

### Printed Pages

From the drop-down list, select **Printed Pages by Function**, **Printed Pages by Paper Size**, or **Printed Pages by Layout** as needed for assign a limit.

### Scanned Page Counts

Shows the total scanned pages of Copy, FAX, and Other Scan.

### FAX Counter

Shows the total pages and times of sending faxes.

### Counter Reset

Click **Reset** button to reset the counters.

4. Click **Other Account** button or **Total Account** button to view the result accounting.

### Other Account

The total number of copies accounted for other account is displayed.

### Total Account

The total number of copies accounted for all account is displayed.

## Authentication

This section includes advanced settings for authentication.

### Settings

To enable authentication, you must first make the authentication settings.

1. Click **Authentication** under **Management Settings** on the navigation menu. The **Settings** page opens.
2. Click **Settings** button. The **Authentication Settings** page opens. This section includes the following items for configuration.

#### General

For **Authentication**, select one of **Off**, **Local Authentication** and **Network Authentication** from the drop-down list.

#### Action Settings

For processing unknown ID jobs, select either **Permit** or **Reject**. To configure this, go to the **Job Accounting Settings** page.

3. If you have selected **Local Authentication** in **General** in step 2 above, switch **Local Authorization On** or **Off**.

If you have selected **Network Authentication** in **General** in step 2 above, configure the following settings.

1. Configure the Network Authentication Server.
  - Host Name:** Enter the host name of the network authentication server. If you use the host name, you must first specify the DNS server information.
  - Port Number:** Enter the port number of the network authentication server.
  - Server Type:** Select the server type from the drop-down list. When you use ID Card, select **Ext..**

- Default Domain:** Click **Domain List** button to open the **Domain List** page. Enter the domain name and click **Submit** button. If you have entered the several domain names, you can select it from the drop-down list.
2. Configure the Network User Settings.
 

**Obtain Network User Property:** Select **On** or **Off**.
  3. Click **Server Settings** button to configure the server settings.
 

**LDAP:** Confirm that LDAP is set to **On**. If the setting is **Off**, switch to **On** in the **Protocol Settings** page under **Network Settings**.

**LDAP Server Name:** Enter the LDAP server name.

**LDAP Port Number:** Enter the LDAP port number.

**Search Timeout:** Enter the search timeout in seconds.

**LDAP Security:** Configure this setting in the **Protocol Settings** page under **Network Settings**.
  4. Configure the **Acquisition of User Information**. Enter **Name 1**, **Name 2**, or **E-mail Address**.
  5. Click **Submit** button.
 

If you configure the Group Authorization Settings, select **On** in Group Authorization, and click **Group List** button. Select the group for authorization, click **Submit** button.
4. You can configure settings for **Action Settings**. For processing unknown ID jobs, select either **Permit** or **Reject**. To configure this, go to the **Job Accounting Settings** page under **Management Settings**.
  5. You can configure settings for **Guest Authorization Settings**.

#### Guest Authorization

Switches Guest Authorization **On** or **Off**.

#### Guest Settings

Click **Guest Settings** button to configure advanced settings for guests.

6. You can configure settings for **Guest Property**.
  1. **User Name:** Type a User name.
  2. **Access Level:** Select User if the user is not an administrator.
  3. **Account Name:** From the drop-down list that is displayed by clicking **Account List** button, select an account name followed by **Submit** button.
  4. Click **Back** button.
7. You can configure settings for **Authorization**.

#### Copy Restriction

Select **Off** or **Reject Usage** as desired.

#### Copy Restriction (Color)

Select **Off** or **Reject Usage** as desired.

#### Copy Restriction (Full Color)

Select **Off** or **Reject Usage** as desired.

#### Print Restriction

Select **Off** or **Reject Usage** as desired.

#### Print Restriction (Full Color)

Select **Off** or **Reject Usage** as desired.

#### Duplex Restriction

Select **Off** or **Permit 2-sided Only** as desired.

#### Combine Restriction

From the drop-down list, select **Off**, **Permit 2 in 1 and 4 in 1 Only**, or **Permit 4 in 1 Only**.

#### EcoPrint Restriction

Select **Off** or **Permit EcoPrint Only** as desired.

#### Send Restriction

Select **Off** or **Reject Usage** as desired.

#### FAX Restriction

Select **Off** or **Reject Usage** as desired.

#### Storing Restriction in Box

Select **Off** or **Reject Usage** as desired.

#### Storing Restriction in Memory

Select **Off** or **Reject Usage** as desired.

8. Click **Submit** button.

## Local User List

The user information can be added or modified on the local user list.

### Add User

This adds a new user. Up to 1000 users can be registered.

1. Click **Add User** icon. The **New User - Property** page opens.
2. You can configure settings for **User Property**. This section includes the following items for configuration:

#### User Name

Enter the name displayed on the user list (up to 32 characters).

#### Login User Name

Enter the user ID to log in (up to 64 characters). You cannot duplicate a login user name to register.

#### Password

Enter the password to log in (up to 64 characters).

#### Confirm Password

To confirm the password, enter the same password that was entered in Password.

**Access Level**

Select either **Administrator** or **User** for privilege.

**Account Name**

From the drop-down list that is displayed by clicking **Account List** button, select an account name followed by **Submit** button.

**E-mail Address**

Add a user's e-mail address. To enable sending e-mail, add your e-mail address. The e-mail address will be automatically selected whenever an e-mail notice is required by functionality.

**Language**

Select either **English, Deutsch, Français, Español, Italiano, Nederlands** or **РУССКИЙ** for the user interface language, from the drop-down list.

**Default Screen**

Select an item for the default screen from the drop-down list.

**Default Screen (Send/FAX)**

In **Default Screen (Send/FAX)**, when clicking **Address Book** to open a drop-down list, this item appears. Select either **Destination** or **Address Book** from the drop-down list.

**Address Book Type**

In **Default Screen (Send/FAX)**, click **Address Book** to open a drop-down list. Select either **Machine Address Book** or **External Address Book**.

**Authorization**

Configure settings for Authorization by referring step 7 of *Settings* on page 74.

3. Click **Submit** button.

**Delete**

1. Click the checkbox to the left of the user name. To select all items at once, click **Check All** icon.
2. Click **Delete** icon once.

**ID Card**

This section includes advanced settings for ID Card authentication.

**ID Card Settings**

To use the ID Card authentication, you must first make the ID Card settings.

1. Click **ID Card** under **Management Settings** on the navigation menu. The **ID Card Settings** page opens.
2. Configure the **Authentication Settings**.

### Keyboard Login

For keyboard login, select **Prohibit** or **Permit**.

### Password Authentication

Select **On** to use the password authentication.

3. Configure the **ID Card Settings**. Select **IDM** or **FeliCa** as the **ID Card Read Type**.
4. Configure the FeliCa Settings.

### System Code 1

Enter the System Code 1 from **0000** to **FFFF**.

### Service Code 1

Enter the Service Code 1 from **0000** to **FFFF**.

### Number of Blocks in Use.

Enter the number of blocks in use from **1** to **255**.

### System Code 2

Enter the System Code 2 from **0000** to **FFFF**.

### Service Code 2

Enter the Service Code 2 from **0000** to **FFFF**.

### Number of Blocks in Use.

Enter the number of blocks in use from **1** to **255**.

Configure the System Code 2 as necessary.

5. Click **Submit** button.

## Notification/Report

This section includes advanced settings for attentions and reports.

### Notification/Report Settings

1. Click **Notification/Report** under **Management Settings** on the navigation menu. The **Notification/Report Settings** page opens.
2. You can configure settings for **Management Report**. This item is shown only when an optional Fax kit is installed.

### Outgoing FAX Report

Select either **On** or **Off**.

### Incoming FAX Report

Select either **On** or **Off**.

3. You can configure settings for **Send Result Report**.

**E-mail/Folder**

From the drop-down list, select **Off**, **On**, or **Error Only**. If an error occurs during transmission, **Error Only** allows a transmission result reported by e-mail and stored in the folder.

**FAX / i-FAX**

From the drop-down list, select **Off**, **On**, **Error Only**, or **Specify Each Job**. If an error occurs during transmission, **Error Only** allows a transmission result reported by e-mail and stored in the folder.

**Attach Image**

Select either **On**, **Off**, or **Full Image**.

**Canceled before Sending**

Select either **On** or **Off**.

**Recipient Format**

Select either **Name or Destination** or **Name and Destination**.

**4.** You can configure settings for **Receive Result Report**.**FAX/i-FAX RX**

From the drop-down list, select **Off**, **On**, or **Error/Storing in Box**. If an error occurs during reception or received draft is forwarded to FAX Box, **Error/Storing in Box** allows a receive result reported by e-mail or report.

**Report Type**

Select either **Print Report** or **E-mail**.

**E-mail Address**

Enter the e-mail address.

**5.** You can configure settings for **Job Finish Notice**.**Attach Image**

Select either **On** or **Off**.

**6.** You can configure settings for **Maintenance Report**.**Equipment ID**

Enter the equipment ID.

**Recipient E-mail Address**

Enter the E-mail address to receive the maintenance reports. Use a semicolon (;) between multiple addresses.

**Subject**

Enter the Subject of the report.

**Maintenance Report Interval**

From the drop-down list, select one of **None**, **Monthly**, **Weekly**, **Daily**, **Hourly** as desired.

For **Monthly**, check the month and select a date and a time from the **Day** and **Time** drop-down lists, respectively.

For **Weekly**, select a day of the week and a time from the **Day** and **Time** drop-down lists, respectively.

For **Daily**, select a time from the **Time** drop-down list.

For **Hourly**, select a time from the **every Hour** drop-down list.

#### Run once now

A maintenance report will be sent to a recipient once automatically when clicking **Send**.

7. Configure **Event Reports/Schedule Reports 1 (to 3)** as follows.

#### Reports 1 (to 3) E-mail Address

Enter the E-mail address for the first recipient.

#### Subject

Enter the Subject of the report using a variable.

#### Event Report

Select an item for the event report in **Event Report Items** and select an interval of sending a report in **Event Report Interval**.

#### Scheduled Report

Select **Counter Status** to attach the counter report.

#### Scheduled Report Interval

From the drop-down list, select one of **None**, **Monthly**, **Weekly**, **Daily**, **Hourly** as desired.

For **Monthly**, check the month and select a date and a time from the **Day** and **Time** drop-down lists, respectively.

For **Weekly**, select a day of the week and a time from the **Day** and **Time** drop-down lists, respectively.

For **Daily**, select a time from the **Time** drop-down list.

For **Hourly**, select a time from the **every Hour** drop-down list.

#### Run once now

A schedule report will be sent to the recipients 1 to 3 once automatically when clicking **Send** button.

8. Click **Submit** button.

## History Settings

This section includes advanced settings for histories.

### History Settings

1. Click **History Settings** under **Management Settings** on the navigation menu. The **History Settings** page opens.

2. Determines whether the **Job Log History** is sent or not.

**Recipient E-mail Address**

The E-mail address of the recipient of reports. If there are more than one recipient, then the addresses should be separated by a semicolon (;).

**Subject**

Enter the subject for the Job Log History.

**SSFC Subject**

Enter the subject for the Job Log History using the ID Card authentication.

**Auto Sending**

Determines whether the job log report is sent or not. Select either **On** or **Off**.

**Number of Records**

Set the number of job logs for sending, from **1** to **1500**.

**Personal Information**

Determines whether personal information are included in job logs. Select **Include** or **Exclude** as desired.

**Run once now**

A job log will be sent to a recipient once automatically when clicking **Send** button.

3. You can configure settings for **Login History Settings**.

**Login History**

Select either **On** or **Off**.

**Recipient E-mail Address**

The E-mail address of the recipient of logs. If there are more than one recipient, then the addresses should be separated by a semicolon (;).

**Subject**

Enter the subject for the Login History.

**Auto Sending**

Determines whether the job log is sent. Select either **On** or **Off**.

**Number of Records**

Set the number of Login Histories for sending, from **1** to **1000**.

**View History**

A Login History List will be shown when clicking **View** button.

**Run once now**

A Login History will be sent to a recipient once automatically when clicking **Send** button.

4. You can configure settings for **Device Log History Settings**.

#### **Device Log History**

Select either **On** or **Off**.

#### **Recipient E-mail Address**

The E-mail address of the recipient of logs. If there are more than one recipient, then the addresses should be separated by a semicolon (;).

#### **Subject**

Enter the subject for the Device Log History.

#### **Auto Sending**

Determines whether the Device Log History is sent or not. Select either **On** or **Off**.

#### **Number of Records**

Set the number of Device Log Histories for sending, from **1** to **1000**.

#### **View History**

A Device Log History List will be shown when clicking **View** button.

#### **Run once now**

A Device Log History will be sent to a recipient once automatically when clicking **Send** button.

5. You can configure settings for **Secure Communication Error Log History Settings**.

#### **Secure Communication Error Log History**

Select either **On** or **Off**.

#### **Recipient E-mail Address**

The E-mail address of the recipient of logs. If there are more than one recipient, then the addresses should be separated by a semicolon (;).

#### **Subject**

Enter the subject for the Secure Communication Error Log History.

#### **Auto Sending**

Determines whether the Secure Communication Error Log History is sent. Select either **On** or **Off**.

#### **Number of Records**

Set the number of Secure Communication Error Log Histories for sending, from **1** to **1000**.

#### **View History**

A Secure Communication Error Log History List will be shown when clicking **View** button.

#### **Run once now**

A Secure Communication Error Log History will be sent to a recipient once automatically when clicking **Send** button.

6. Click **Submit** button.

## SNMP

This section includes advanced settings for SNMP.

If the settings for the item marked with an asterisk (\*) has been changed, you must restart the machine or the network. To restart the machine, proceed to the **Reset** page.

### SNMP Settings

1. Click **SNMP** under **Management Settings** on the navigation menu. The **SNMP Settings** page opens.
2. Configure **SNMPv1/v2c** as follows.

#### SNMPv1/v2c

Activate or deactivate the SNMPv1/v2c protocol. Select either **On** or **Off** in the **Protocol Settings** page under **Network Settings**. To configure SNMP v1/v2, proceed as follows.

#### Read Community

Enter the community name for SNMP requests to read a value. The default name is 'public'. After you have changed the setting, you must restart the printing system.

#### Write Community

Enter the community name for SNMP requests to write (change) a value. The default name is 'public'. After you have changed the setting, you must restart the printing system.

#### sysContact

The MIB-II sysContact object. Usually this is the E-mail address of the network administrator.

#### sysName

The MIB-II sysName object. Usually this is the host or domain name of the printing system.

#### sysLocation

The MIB-II sysLocation object. Usually this is the location information of the printing system which is described under **Location** of **System Settings** page. Go to the **System Settings** page under **Device Settings** to modify the settings.

#### HP Web Jetadmin Compatibility

Turns HP Web Jetadmin Compatibility **On** or **Off**. After you have changed the setting, you must restart the printing system.

#### Authentication Traps

Specifies whether to use authentication traps. If enabled (**On**), an SNMP trap is generated when an attempt to read or write is made using an incorrect community name. The trap is sent to the configured trap address. After you have changed the setting, you must restart the printing system.

#### Trap Recipient

Click **Settings** button to finalize the settings.

3. Configure **SNMPv3** as follows. After you have changed the setting, you must restart the printing system.

#### SNMPv3

Sets whether to use the SNMPv3 protocol. Select either **On** or **Off** in the **Protocol Settings** page under **Network Settings**. To configure SNMP v3, proceed as follows.

#### Authentication

Sets whether the user authentication is performed in SNMP communication.

#### Hash

Select either **MD5** or **SHA1** for Hash algorithm. This item becomes active when the Authentication is set to **On**.

#### Privacy

Sets whether to encrypt the communicated data in SNMP communication. This becomes available when Authentication is set to **On**.

#### Encryption

Select either **DES** or **AES** for encryption algorithm. This item becomes active when the Authentication is set to **On**.

#### Read Only User

Enter **User Name** and **Password** of the read-only user.

#### Read/Write User

Enter **User Name** and **Password** of the read/write user.

4. Click **Submit** button.

## System stamp

This section includes advanced settings that apply to the system stamp.

### System stamp settings

The system stamps include character and serial numbered stamps. Both are applied to printing, sending, and storing jobs. For example, the following describes how to apply the character and serial numbered stamps to a printing job.

### Setting a Character Stamp

1. Click **System Stamp** under **Management Settings** on the navigation menu. The **System Stamp Settings** page opens.
2. To apply a character stamp to a print job, proceed as follow. Select **On** or **Off** and click **Settings** button.
  1. **Stamp Settings:** Select a type of stamps from the drop-down list. Select **Text Entry** to enter a text for the stamp.
  2. **Stamp Method Settings:** Select either **Each Print Page** or **Each Original Page** to show the stamp.
  3. **Position Settings:** Select the position and rotation for the stamp.
 

**Position:** Select how the stamp is positioned on the page, from the drop-down list.

**Nudge:** Nudge the stamp in range of -10 to +10, from right to left or up and down, as you exactly intend to position on the page.

**Back page:** Select **Mirror Front Page** or **Same as Front Page** as desired.

**Rotation:** Select **Clockwise** or **Counterclockwise** and enter the angle as desired.
  4. **Font Settings:** Select the typography for the characters of the stamp.
 

**Font Type:** From the drop-down list, select **Courier** or **Letter Gothic** as desired.

**Font Size:** From the drop-down list, select **64.0 pt**, **48.0 pt**, or **24.0 pt**.

**Bold:** Select either **On** or **Off**.

**Italic:** Select either **On** or **Off**.

**Color:** Select the color for the text from the drop-down list.

**Character Border:** Select the type of borders for the text from the drop-down list.

**Display Pattern:** From the drop-down list, select **Transparent**, **Clipping**, or **Over-write**.

**Density:** Select the transparency of the character stamp, from the drop-down list. The less the value, the more the stamp becomes transparent.
3. Click **Submit** button. To cancel settings, click **Back** button.

### Creating a Bates Stamp

1. Click **System Stamp** under **Management Settings** on the navigation menu. The **System Stamp Settings** page opens.
2. To serial-number the printed pages, proceed as follow. Select **On** or **Off** and click **Settings** button.
  1. **Stamp Settings:** Add or delete properties of the stamp for serial numbering as follows.
 

**Add Stamp:** You can add **Date**, **User ID**, **Serial Number**, **Numbering**, and **Text 1** or **Text 2** to a stamp.

To remove a stamp, select the stamp on the list and click **Delete** button.

**Date Format:** Select a format of date from the drop-down list.

**Text:** Enter a text in **Text 1** or **Text 2** for the serial numbered stamp.
  2. **Numbering Settings:** Select the numbering properties of the bates stamp.
 

**Fixed Digit Number:** Select a number of digits to fix from the drop-down list.

**Numbering Default:** Enter the initial value of the serial number.
  3. **Position Settings:** Select the position for the stamp.
 

**Position:** Select how the stamp is positioned on the page, from the drop-down list.

**Nudge:** Nudge the stamp in range of -10 to +10, from right to left or up and down, as you exactly intend to position on the page.

**Back Page:** Select **Mirror Front Page** or **Same as Front Page** as desired.
  4. **Form Settings:** Select the typography for the characters and the display pattern of the stamp.
 

**Font Type:** From the drop-down list, select **Courier** or **Letter Gothic** as desired.

**Font size:** From the drop-down list, select **14.0 pt**, **12.0 pt**, or **10.5 pt**.

**Bold:** Select either **On** or **Off**.

**Italic:** Select either **On** or **Off**.

**Color:** Select the color for the text from the drop-down list.

**Display Pattern:** From the drop-down list, select **Transparent**, **Clipping**, or **Overwrite**.

**Density:** Select the transparency of the character stamp, from the drop-down list. The less the value, the more the stamp becomes transparent.

3. Click **Submit** button. To cancel settings, click **Back** button.

### Stamp Default Settings

1. Click **System Stamp** under **Management Settings** on the navigation menu. The **System Stamp Settings** page opens.
2. To change the stamp default settings, click **Settings** button in **Default Settings**.
  1. **Text Stamp:** Add or delete the text stamp as follows.
    - Text 1 (to 10):** Enter the text for text stamp. To remove the text stamp, delete the text in **Text 1 (to 10)**.
  2. **Font Size:** Enter the following font size.
    - Page #:** Enter **Font Size 1 (to 3)** for page number in range of **6.0** to **64.0** pt as necessary.
    - Text Stamp:** Enter **Font Size 1 (to 3)** for text stamp in range of **6.0** to **64.0** pt as necessary.
    - Bates Stamp:** Enter **Font Size 1 (to 3)** for bates stamp in range of **6.0** to **64.0** pt as necessary.
3. Click **Submit** button. To cancel settings, click **Back** button.

## Message Board

This section provides information on how to configure the message board that is shown on the machine's operation panel of the embedded web server.

### Settings

To enable the message board, you must first make settings for the message board.

1. Click **Message Board** under **Management Settings** on the navigation menu. The **Settings** page opens.
2. Click **Settings** button.
3. To enable the message board, select **On** and click **Submit** button. To cancel settings, click **Back** button.

### Adding a Message List

1. Click **Add** icon. The **New Message - Property** page opens.
2. You can configure settings for property. This section includes the following items for configuration:

#### Device to Show

Add **Operation Panel** and/or **Command Center RX**.

#### Place to Show

You can add **Home** and/or **Login Screen**.

### Message Type

Select a type of message from **Normal**, **Alert**, and **Prohibition** on the drop-down list.

### Priority Show

Determines whether the message board is prioritized to show. To apply the message board with priority, select **On**.

### Title

You can enter the title of the message board.

### Body

Enter the message you want to post on the message board.

3. Click **Submit** button.

## Delete

1. Click the checkbox to the left of the message list. To select all items at once, click **Check All** icon.
2. Click **Delete** icon once.

## Priority

You can modify the order of the messages.

1. Click the checkbox to the left of the message list.
2. To give an increased priority for a message, select the message and click **Raise Priority** icon. To give a decreased priority for a message, select the message and click **Lower Priority** icon.

## Reset

This section includes advanced settings for resetting.

### Restart

1. Click **Reset** under **Management Settings** on the navigation menu. The **Reset** page opens.
2. Restart the device or network as needed.

#### Restart Device

Clicking **Restart Device** button restarts the machine.

#### Restart Network

Clicking **Restart Network** button restarts the network interface card integrated in the machine.

### Reset device to factory default

1. Click **Reset** under **Management Settings** on the navigation menu. The **Reset** page opens.
2. Click **Initialize** button as needed. The machine is reset to the factory default.

# 11 Troubleshooting

Consult the table below to find basic solutions for problems you may encounter with the embedded server.

| Symptom                             | Check Items  | Corrective Action  | Reference  |
|-------------------------------------|--|--|--|
| I can't access the embedded server. | Is the power turned on to this machine?  | Turn the power on to this machine, wait until it is in the ready state, and try to access the embedded server.   | <i>Operation Guide</i>   |
|                                     | Is the network cable properly connected?   | Connect the network cable properly.  | <i>Operation Guide</i>   |
|                                     | Are the network settings that are made in this machine correct?  | Perform the network settings from the operation panel. Contact your network administrator for the appropriate settings.  | -  |
|                                     | Is the IP address for this machine entered correctly?  | Enter the correct IP address. Check this machine IP address with your network administrator.   | -  |
|                                     | Are the LAN settings that are made in web browser correct?   | Check the settings made in web browser. Refer to the Help function in your browser.  | -  |
|                                     | Has the administrator set up an IP Filter function?  | Access the embedded server from an approved IP address.  | <i>IP Filter (IPv4) on page 55</i><br><i>IP Filter (IPv6) on page 56</i> |
|                                     | Is <b>HTTP Security</b> in <b>Serverside Settings</b> of the <b>Security Settings</b> page under <b>Network Security</b> set to <b>Secure Only (HTTPS)</b> ? | When <b>HTTP Security</b> is set to <b>Secure Only (HTTPS)</b> , specify a URL that begins with https://. You cannot access the embedded server with an "http://" URL. | <i>Network Security Settings on page 68</i>                              |

| Symptom  | Check Items  | Corrective Action   | Reference                            |
|--|--|---|--------------------------------------|
| I can't access the embedded server.                        | Does the version of your browser application support operation using the embedded server?          | Use a browser application that supports the embedded server.  | <i>System Requirements on page 1</i> |
| Characters do not display properly in the embedded server. | Does the version of your browser application support operation using the embedded server?          | Use a browser application that supports the embedded server.  | <i>System Requirements on page 1</i> |
|  | Is the same language as that displayed on the operation panel selected?                            | Select the same language as that displayed on the operation panel.                                    | <i>Top Bar on page 3</i>             |
| I can't access the other pages.                            | Is <b>User</b> set for the access level?   | Change the access level to <b>Administrator</b> .   | <i>Local User List on page 76</i>    |
| I can't perform settings.                                  | Is the printer or scanner currently in operation?  | Wait until the operation has been completed.  | -                                    |
| The settings I made are not finalized.                     | Did you click <b>Submit</b> button after making the settings?                                      | Click <b>Submit</b> button and move to another page or close the embedded server window.              | -                                    |
|  | Did you click <b>Restart</b> button after making the settings?                                     | Restart this machine. All settings will be registered.  | <i>Reset on page 87</i>              |
|  | Are you using the System menu on this machine's panel while the embedded server is being operated? | Operate the embedded server after you have finished with the System menu.                             | -                                    |
| The administrator has forgotten the Admin password.        | -  | Contact your dealer or service center.  | -                                    |
| Error or Warning is displayed under the STATUS indicator.  | Is there an error message shown in the display?  | Perform the troubleshooting procedure the messages suggests referring to the <i>Operation Guide</i> . | <i>Operation Guide</i>               |



**KYOCERA Document Solutions America, Inc.****Headquarters**

225 Sand Road,  
Fairfield, New Jersey 07004-0008, USA  
Phone: +1-973-808-8444  
Fax: +1-973-882-6000

**Latin America**

8240 NW 52nd Terrace Dawson Building, Suite 100  
Miami, Florida 33166, USA  
Phone: +1-305-421-6640  
Fax: +1-305-421-6666

**KYOCERA Document Solutions Canada, Ltd.**

6120 Kestrel Rd., Mississauga, ON L5T 1S8,  
Canada  
Phone: +1-905-670-4425  
Fax: +1-905-670-8116

**KYOCERA Document Solutions  
Mexico, S.A. de C.V.**

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco  
Chapultepec, Delegacion Miguel Hidalgo,  
Distrito Federal, C.P. 11560, México  
Phone: +52-555-383-2741  
Fax: +52-555-383-7804

**KYOCERA Document Solutions Brazil, Ltda.**

Av. Tambore, 1180 Mod. B-09 CEP 06460-000  
Tambore-Barueri-SP, Brazil  
Phone: +55-11-4195-8496  
Fax: +55-11-4195-6167

**KYOCERA Document Solutions  
Australia Pty. Ltd.**

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113,  
Australia  
Phone: +61-2-9888-9999  
Fax: +61-2-9888-9588

**KYOCERA Document Solutions  
New Zealand Ltd.**

Ground Floor, 19 Byron Avenue, Takapuna, Auckland,  
New Zealand  
Phone: +64-9-415-4517  
Fax: +64-9-415-4597

**KYOCERA Document Solutions Asia Limited**

16/F., Mita Centre, 552-566, Castle Peak Road  
Tsuenwan, NT, Hong Kong  
Phone: +852-2610-2181  
Fax: +852-2610-2063

**KYOCERA Document Solutions  
(China) Corporation**

8F, No. 288 Nanjing Road West, Huangpu District,  
Shanghai, 200003, China  
Phone: +86-21-5301-1777  
Fax: +86-21-5302-8300

**KYOCERA Document Solutions  
(Thailand) Corp., Ltd.**

335 Ratchadapisek Road, Bangsue, Bangkok 10800,  
Thailand  
Phone: +66-2-586-0333  
Fax: +66-2-586-0278

**KYOCERA Document Solutions  
Singapore Pte. Ltd.**

12 Tai Seng Street #04-01A,  
Luxasia Building, Singapore 534118  
Phone: +65-6741-8733  
Fax: +65-6748-3788

**KYOCERA Document Solutions  
Hong Kong Limited**

16/F., Mita Centre, 552-566, Castle Peak Road  
Tsuenwan, NT, Hong Kong  
Phone: +852-3582-4000  
Fax: +852-3185-1399

**KYOCERA Document Solutions  
Taiwan Corporation**

6F., No. 37, Sec. 3, Minquan E. Rd.,  
Zhongshan Dist., Taipei 104, Taiwan R.O.C.  
Phone: +886-2-2507-6709  
Fax: +886-2-2507-8432

**KYOCERA Document Solutions Korea Co., Ltd.**

18F, Kangnam bldg, 1321-1,  
Seocho-Dong, Seocho-Gu, Seoul, Korea  
Phone: +822-6933-4050  
Fax: +822-747-0084

**KYOCERA Document Solutions  
India Private Limited**

First Floor, ORCHID CENTRE  
Sector-53, Golf Course Road, Gurgaon 122 002,  
India  
Phone: +91-0124-4671000  
Fax: +91-0124-4671001

**KYOCERA Document Solutions Europe B.V.**

Bloemlaan 4, 2132 NP Hoofddorp,  
The Netherlands  
Phone: +31-20-654-0000  
Fax: +31-20-653-1256

**KYOCERA Document Solutions Nederland B.V.**

Beechavenue 25, 1119 RA Schiphol-Rijk,  
The Netherlands  
Phone: +31-20-5877200  
Fax: +31-20-5877260

**KYOCERA Document Solutions (U.K.) Limited**

Eldon Court, 75-77 London Road,  
Reading, Berkshire RG1 5BS,  
United Kingdom  
Phone: +44-118-931-1500  
Fax: +44-118-931-1108

**KYOCERA Document Solutions Italia S.p.A.**

Via Verdi, 89/91 20063 Cernusco s/N.(MI),  
Italy  
Phone: +39-02-921791  
Fax: +39-02-92179-600

**KYOCERA Document Solutions Belgium N.V.**

Sint-Martinusweg 199-201 1930 Zaventem,  
Belgium  
Phone: +32-2-7209270  
Fax: +32-2-7208748

**KYOCERA Document Solutions France S.A.S.**

Espace Technologique de St Aubin  
Route de l'Orme 91195 Gif-sur-Yvette CEDEX,  
France  
Phone: +33-1-69852600  
Fax: +33-1-69853409

**KYOCERA Document Solutions Espana, S.A.**

Edificio Kyocera, Avda. de Manacor No.2,  
28290 Las Matas (Madrid), Spain  
Phone: +34-91-6318392  
Fax: +34-91-6318219

**KYOCERA Document Solutions Finland Oy**

Atomitie 5C, 00370 Helsinki,  
Finland  
Phone: +358-9-47805200  
Fax: +358-9-47805390

**KYOCERA Document Solutions  
Europe B.V., Amsterdam (NL) Zürich Branch**

Hohlstrasse 614, 8048 Zürich,  
Switzerland  
Phone: +41-44-9084949  
Fax: +41-44-9084950

**KYOCERA Document Solutions  
Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,  
Germany  
Phone: +49-2159-9180  
Fax: +49-2159-918100

**KYOCERA Document Solutions Austria GmbH**

Eduard-Kittenberger-Gasse 95, 1230 Vienna,  
Austria  
Phone: +43-1-863380  
Fax: +43-1-86338-400

**KYOCERA Document Solutions Nordic AB**

Esbogatan 16B 164 75 Kista, Sweden  
Phone: +46-8-546-550-00  
Fax: +46-8-546-550-10

**KYOCERA Document Solutions Norge Nuf**

Postboks 150 Oppsal, 0619 Oslo,  
Norway  
Phone: +47-22-62-73-00  
Fax: +47-22-62-72-00

**KYOCERA Document Solutions Danmark A/S**

Ejby Industrivej 60, DK-2600 Glostrup,  
Denmark  
Phone: +45-70223880  
Fax: +45-45765850

**KYOCERA Document Solutions Portugal Lda.**

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,  
Portugal  
Phone: +351-21-843-6780  
Fax: +351-21-849-3312

**KYOCERA Document Solutions  
South Africa (Pty) Ltd.**

KYOCERA House, Hertford Office Park,  
90 Bekker Road (Cnr. Allandale), Midrand, South Africa.  
Phone: +27-11-540-2600  
Fax: +27-11-466-3050

**KYOCERA Document Solutions Russia LLC**

Botanichesky pereulok 5, Moscow, 129090,  
Russia  
Phone: +7(495)741-0004  
Fax: +7(495)741-0018

**KYOCERA Document Solutions Middle East**

Dubai Internet City, Bldg. 17,  
Office 157 P.O. Box 500817, Dubai,  
United Arab Emirates  
Phone: +971-04-433-0412

**KYOCERA Document Solutions Inc.**

2-28, 1-chome, Tamatsukuri, Chuo-ku  
Osaka 540-8585, Japan  
Phone: +81-6-6764-3555  
<http://www.kyoceradocumentsolutions.com>

